

1 Pick a Spot for Your Radio

Install the Dash or Vent Mount

You can use either the Dash Mount or the Vent Mount for your Xpress^{RCI}, depending upon your vehicle and the location where you want to place your radio.

CAUTION! Make sure your radio isn't in a place where it could interfere with driver visibility or safe deployment of the airbags.

IMPORTANT! When you install the chosen mount, do not yet attach the PowerConnect Vehicle Dock to the mount. The cables must be attached prior to connecting the dock to the mount.

Installing the Dash Mount:


CAUTION: The adhesive used on the mount may be difficult to remove. Do not install this mount on leather surfaces, and make sure the air temperature is at least 15°C (60°F) during installation.

1. Locate a flat surface for the Dash Mount. (Options 1, 2, or 3.) Make sure there is ample room for the dock and radio when installed.

2. Set the orientation of the mount before adhering it. Loosen the knob and adjust the adhesive foot for the location you selected:


- Option 1 & 3 should be oriented as **I**.
- Option 2 should be oriented as **II**.

3. The dock mounting plate can be tilted in different directions. Adjust as necessary for your particular vehicle. When the orientation is correct, tighten the knob.

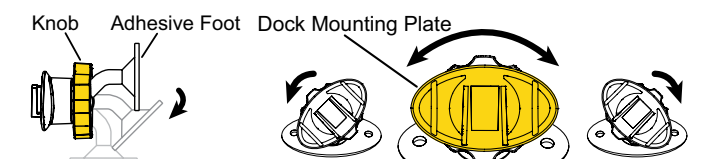


4. Clean the surface with the alcohol preparation pad, and let it dry thoroughly.


5. Peel off the adhesive liner. Position, press, and hold the Dash Mount in place for 30 seconds.

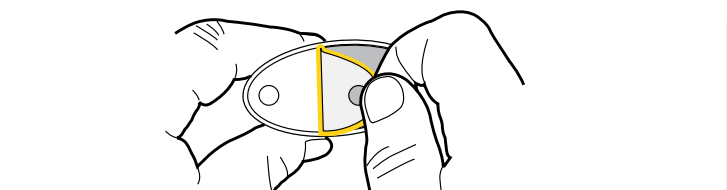


IMPORTANT! Let the Dash Mount adhesive cure (dry) for 24 hours before attaching the PowerConnect Vehicle Dock and radio to the mount.

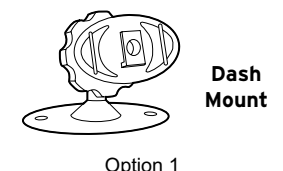


Dash Mount

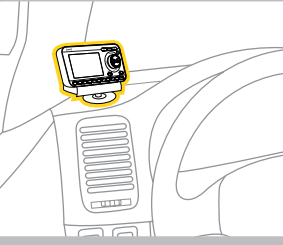

Option 1

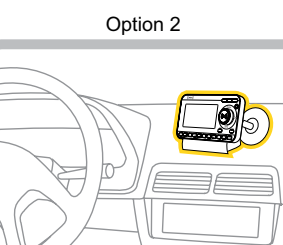

Option 2

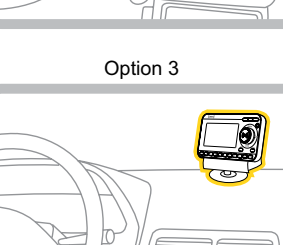



Option 3

Pick a Spot for Your Radio (continued)

Install the Vent Mount:


1. Locate a suitable vent in your vehicle which is strong enough to hold the Xpress^{RCI} and the PowerConnect Vehicle Dock. (Options 4 or 5.)

2. If the vent louvers are recessed, you'll have to use the extended vent hooks. The Vent Mount is assembled with the short vent clamps, so you will have to remove the short clamps and install the extended clamps as shown below.

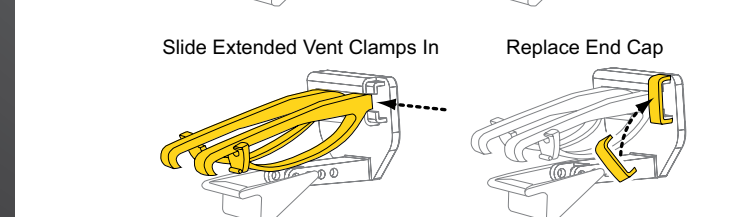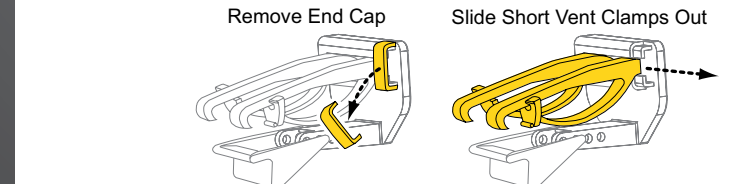

3. Push the Vent Mount onto the vehicle vent as shown (1) until hooked on the rear of the vent louver (2).


4. Rest the foot against the bottom of the vent (2). If necessary, adjust the tilt of the Vent Mount by repositioning the foot to a different tilt adjustment hole (3).

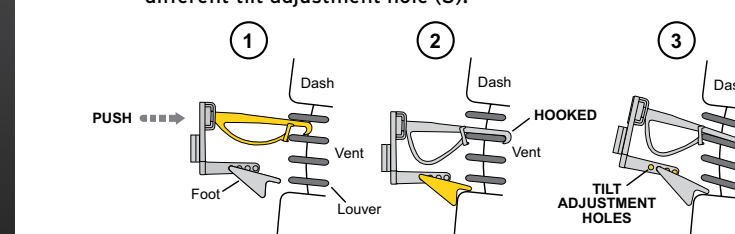


Option 4




Option 5

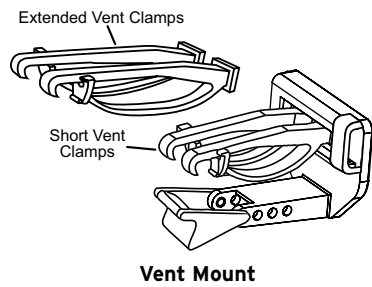

Vent Mount

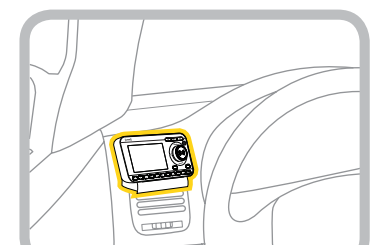

Option 4

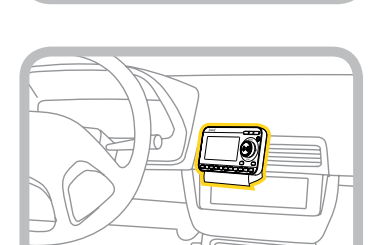

Option 5

2 Install the Magnetic Mount Antenna

Mount the Magnetic Mount Antenna

Choose the best location for the antenna considering your vehicle type. Refer to the antenna placement tips and cautions in the User Guide beginning on page 22.

- **Sedan or Coupe:** We recommend mounting the antenna just above either the front windshield or the back window.
- **Pickup Truck:** We recommend mounting the antenna just above the front windshield.
- **Convertible:** We recommend mounting the antenna at the leading edge of the trunk.
- **SUV:** We recommend mounting the antenna at the rear of the roof.

CAUTION! STOP and read the more specific instructions in the User Guide for all types of vehicles – or get someone who knows vehicles to help – if you don't understand what to do. You might accidentally do damage to your ride.

Feed the antenna wire under the rubber molding around the front or rear windshield, and into the seal around the trunk or door. For a convertible, the cable can be routed directly into the trunk.

TIP! Use a tool like a blunt plastic putty knife, a credit card, a plastic knife, or a similar blunt tool to help hide wires along the windshield trim.

Hide the Magnetic Mount Antenna Cable Inside the Vehicle


The best place to hide your antenna cable depends on your type of vehicle.

When the antenna is mounted at the rear of the vehicle, it's usually easiest to run the cable from the rear to the front toward the radio by routing the cable along the interior trim where it meets the carpet, gently pushing it behind the edges of the trim. Bring the cable out from the trim and route it under the carpet toward the dashboard.

When the antenna is mounted at the front of the vehicle, bring the cable into the rubber weather stripping around the door to the bottom of the door opening. Bring the cable out of the weather stripping and route it under the carpet toward the dashboard.


Coil any excess cable in a hidden location, such as under the carpet, keeping it away from any vehicle pedals or controls. Secure the excess cable with wire ties.

Plug the antenna into the silver ANT connection on the rear of the dock.

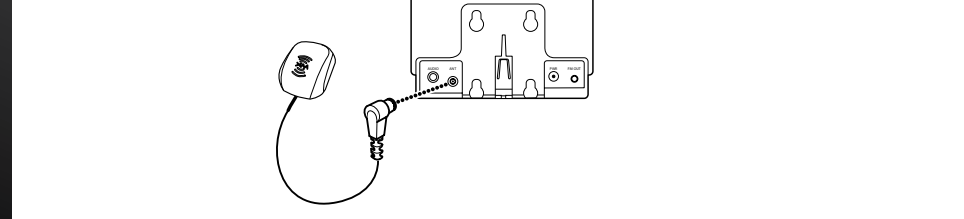

TIP! A dry vehicle is nice. Avoid damaging or compromising the window, door, and trunk seals.

TIP! For more help, refer to the detailed antenna cable routing instructions for your type of vehicle, in the User Guide beginning on page 27.

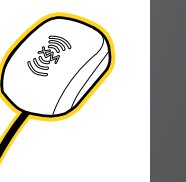

Antenna



Option 1



Option 2



Option 3




Option 4

3 Connect the Audio to Your Vehicle's Stereo

Decide How to Connect

To listen to Xpress^{RCI} through your vehicle's stereo system or FM radio, it must be receiving the XM signal. Be sure your vehicle is outside and the antenna has a clear view of the sky. Connect your Xpress^{RCI} to play its audio through your vehicle's stereo system or FM radio using one of the following options:

- **Best:** Use the **Aux In Cable** if your vehicle's stereo system has an auxiliary input connection. Plug one end of the Aux In Cable into the green AUDIO connector on the PowerConnect Vehicle Dock, and the other end into the auxiliary input jack on the vehicle's stereo system. Refer to your vehicle's owners manual to find the location of the auxiliary input jack, or consult the vehicle dealer.

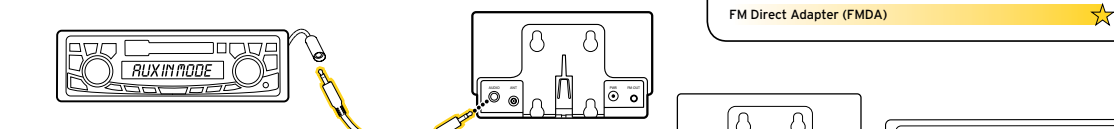

- **Better:** Use a **Cassette Adapter** if your vehicle has a built-in cassette player. Cassette Adapters are sold separately and can be purchased from an electronics retailer, or go to xmradio.ca/accessories. Plug the Cassette Adapter into the green AUDIO connector on the PowerConnect Vehicle Dock. Insert the Cassette Adapter into the vehicle's cassette deck.

- **Good:** Use the **PowerConnect** feature in the Xpress^{RCI}. PowerConnect plays the audio through your vehicle's FM radio. When you have finished step 4 (below), you'll first need to find an available FM channel in your area, and then you need to ensure that the Xpress^{RCI} and your vehicle's FM radio are tuned to the same available FM channel. (Step 5)


- **Best:** Use an **FM Direct Adapter**. If none of the above three audio connection options works in your vehicle, you need to use the FM Direct Adapter (FMDA). The FMDA needs to be installed by a professional installer and directly connects the Xpress^{RCI} to your vehicle's FM radio. To learn more, check with the retailer where you bought your radio or go to xmradio.ca/accessories.

Audio Quality	GOOD	BETTER	BEST
PowerConnect	★		
Cassette Adapter	★	★	
Aux In Cable	★	★	★
FM Direct Adapter (FMDA)	★	★	★

4 Finish the Installation and Power On

Connect the PowerConnect Power Adapter

Insert the PowerConnect Power Adapter into your vehicle's cigarette lighter or power adapter socket. Then plug it into the red PWR connector on the rear of the dock.

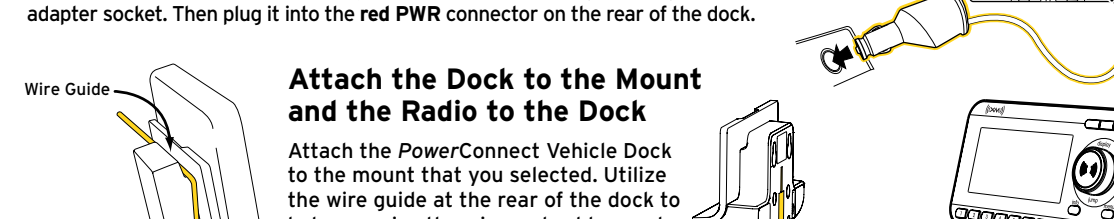

Attach the Dock to the Mount and the Radio to the Dock

Attach the PowerConnect Vehicle Dock to the mount that you selected. Utilize the wire guide at the rear of the dock to help organize the wire and cables, and make your installation neater.

Place the Xpress^{RCI} into the dock. Press the **Power** button to turn it On.

5 PowerConnect

If you have connected the audio in step 3 using the Aux In Cable or Cassette Adapter, continue with step 6.

Tune the Xpress^{RCI} and Vehicle FM Radio to the Same FM Channel

1. Find an Available FM Channel in Your Area
An available FM channel is one that's not being used by an FM radio station in your area. When you tune your FM radio to an available channel, you should only hear static or silence – not talk or music. To find an available FM channel:

- Manually tune through your local FM channels on your vehicle's FM radio. Locate and create a list of channels that aren't being used by any FM radio station. Write down the list. Once you have created your list of available FM channels, you will need to find the one that provides the best match for Xpress^{RCI}.

TIP! You'll need to use the 'Manual' tune function on your vehicle's FM radio to tune through every FM channel one-by-one. Start at 88.1 and use the 'Manual' tune function on your vehicle's FM radio to tune through each FM channel one-by-one (88.1 followed by 88.3 etc.) to locate channels that aren't being used by a local FM radio station. Write down each FM channel that has only static or silence on it, until you reach 107.9.

 

2. Turn the Xpress^{RCI}'s FM Transmitter On.

- Turn On the Xpress^{RCI} by pressing the **Power** button.
- Press **menu**.
- Press the **Select** button to select **Vehicle Mode**.
- Press the **Select** button to select **FM Transmitter** which will turn yellow.
- Turn the **Control knob** clockwise to display **On** and press the **Select** button.

3. Tune the Xpress^{RCI} and the Vehicle FM Radio to the Same FM Channel.

- Press **menu**.
- Press the **Select** button to select **Vehicle Mode**.
- Scroll to highlight **FM Channels** and press the **Select** button.
- Scroll to highlight the storage location (FM-1 to FM-5) you want to set and press the **Select** button. You can choose among the following options:
 - If the chosen storage location is empty (denoted by "----"), or if the storage location contains the FM preset currently being used (denoted by "Current"), then a list of FM channels is displayed.
 - If the chosen storage location has an FM preset that is not currently being used, and you want to edit it, scroll to highlight **Edit Channel** and press the **Select** button to see the list of FM channels.
 - If the chosen storage location has an FM preset that is not currently being used, and you want to start using it, press the **Select** button to select **Start Using**. Skip to step 7.

e. Scroll to highlight the desired FM channel from the list and press the **Select** button.

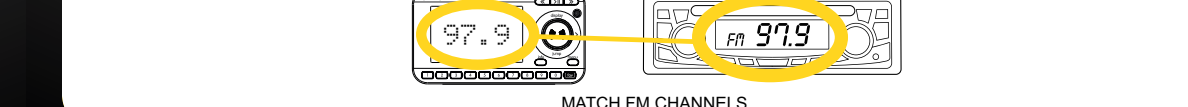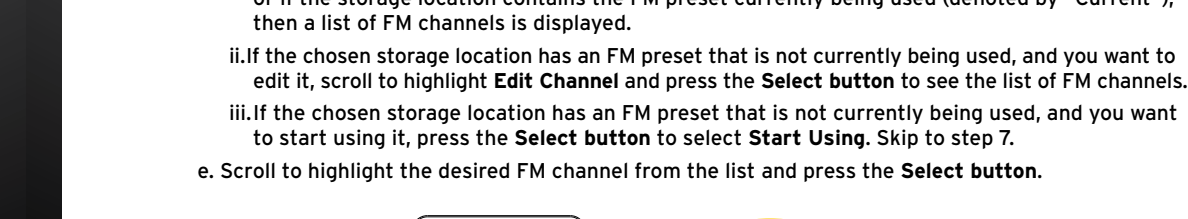

MATCH FM CHANNELS

PowerConnect (continued)

f. If you are editing the storage location that has the "Current" FM channel, skip to step 7. Otherwise press the **Select** button to select **Start Using**.

TIP! You can also preset a new FM preset in a storage location without having to start using it right away. Just press **menu** and exit the screen.

g. The chosen FM channel will be confirmed on the display screen and the Xpress^{RCI} will tune to that FM channel. Press the **Select** button to continue.

h. Set your vehicle's FM radio to same FM channel.

IMPORTANT! You'll first need to find an unused FM channel that is available in your area.



Set your vehicle radio to the above channel to enable audio. Press Select to Continue.

6 Activate

Activate Your Service

Before you can enjoy Commercial-Free Music, plus Sports, News, Talk & Entertainment, you need to activate your Xpress^{RCI}.


- Make sure your Xpress^{RCI} is properly installed and receiving the XM signal so that you can hear the audio on channel 1.
- Make a note of your XM Radio ID. You can find it on channel 0, on a label on the bottom of the gift box, and on the label on the back of your Xpress^{RCI}.

NOTE! The XM Radio ID does not use the letters I, O, S, or F.

TIP! If the signal reception is low, check to see if the antenna's view of the sky is blocked by a tree, a building, a bridge, or by anything on the vehicle roof such as a roof rack or luggage container, etc. Adjust until you are receiving a good signal. Press **menu**, turn the **Control knob** to scroll to and highlight **Signal Indicator**. Press the **Select** button to display the **Signal Indicator** screen.


- Activate your service:
 - Online: Go to www.xmradio.ca and click on "ACTIVATE RADIO" in the top right corner OR
 - By phone: Call 1-877-GET-XMSR (1-877-438-9677)

TIP! You can follow the built in activation wizard in your Xpress^{RCI}. If your radio has not been activated, press **menu** and the first item in the list will be **Activate Radio**. Press the **Select** button. A series of screens will guide you through the activation process. Follow the instructions on each screen. Press the **Select** button to advance to the next screen, or **menu** to cancel the activation process.

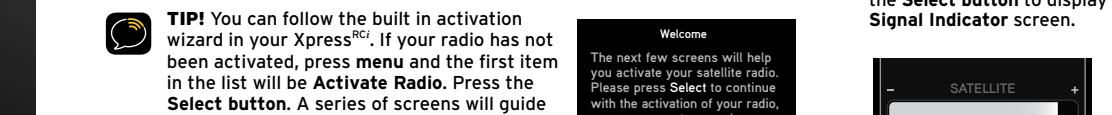


4. When your service is activated, your Xpress^{RCI} will receive all channels and into which have subscribed. At this time, if you turn the control knob, you can scroll and tune into other channels. Activation usually takes 10 to 15 minutes, but may take up to an hour. We recommend that your radio remain on until activated.

What's in the Box?

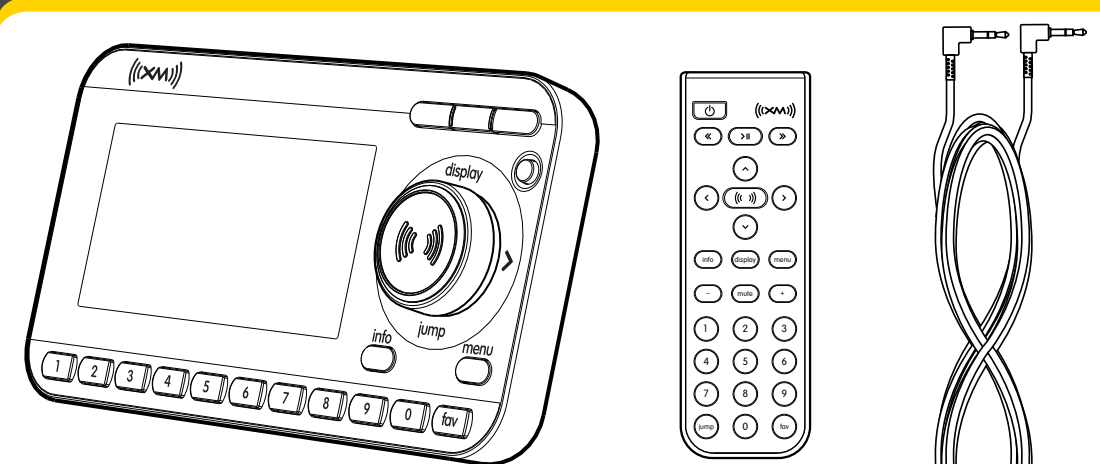

Xpress^{RCi} Radio


Remote Control

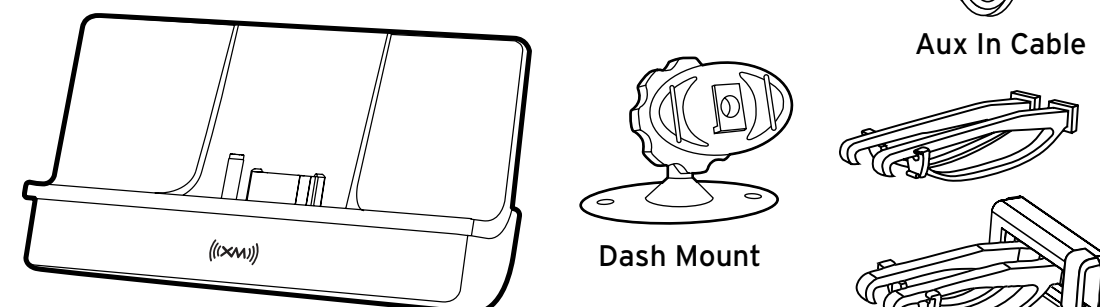

PowerConnect Vehicle Dock

Dash Mount

Aux In Cable

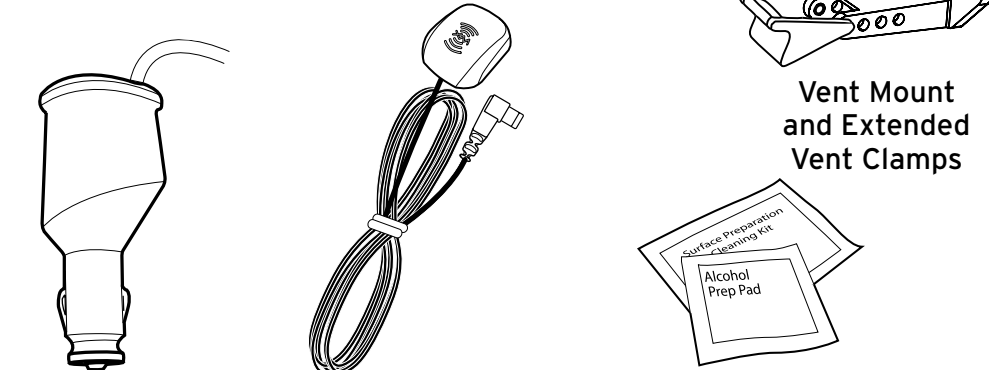

PowerConnect Power Adapter

Magnetic Mount Antenna

Antenna & Adhesive Mount Alcohol Preparation Pads



Xpress^{RCi}

Quick Start Guide



XDRC2V1KC


Audiovox Electronics Corporation
150 Marcus Blvd.
Hauppauge, New York 11788 U.S.A.
1 800 645 4994
www.audiovox.com

XM name and related logos are registered trademarks of XM Satellite Radio Inc. All other trademarks are the property of their respective owners.

© 2007 Audiovox Electronics Corporation. All rights reserved.

Xpress^{RCi} Button & Control Knob Functions


- Control Knob**
Scroll through lists and preview channels; also highlight menu options.
- Pause and Replay Buttons**
Pause, rewind, and replay up to 60 minutes of live radio.
- Display**
Customize the way you view content on the display.
- Power Button**
Turn radio on and off.
- Select Button**
Press to confirm selection for channel and menu items; also press and hold to GameSelect, to TuneSelect, or to save a song.
- Left and Right Arrows**
Search for channels by category; also when in Replay mode, rewind or fast-forward through content
- Menu Button**
Access advanced features and configuration options; also press and hold to access FM presets.
- Fav Button**
Choose among the different tuning modes: Direct, Favourite Channels, and SongSaver.
- Number Buttons**
Select your favorite channels; also enter a channel number directly; also access songs saved in SongSaver.
- Info Button**
View either sports or stock information.
- Jump**
Switch between current channel and previous channel.

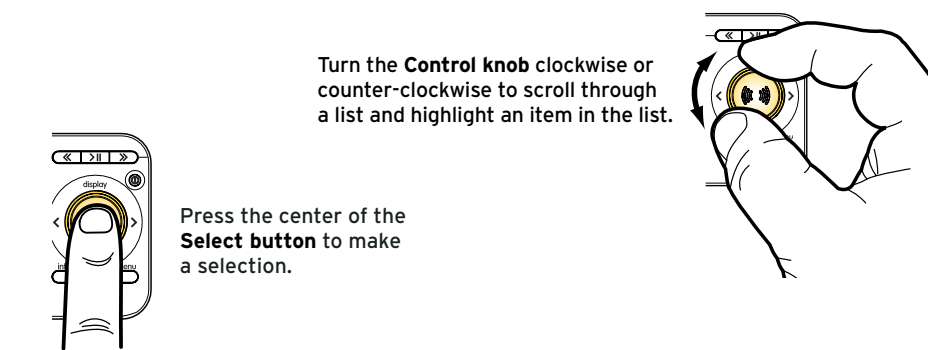

Turn the **Control knob** clockwise or counter-clockwise to scroll through a list and highlight an item in the list.

Press the center of the **Select button** to make a selection.

Press the edge to tilt the **Select button** to select **>**, **<**, **display**, or **jump**.

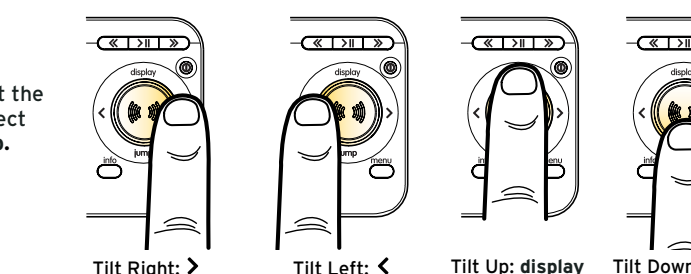

Tilt Right: **>** Tilt Left: **<** Tilt Up: **display** Tilt Down: **jump**