



User Guide

**Starmate 7
Radio & Vehicle Kit**

Table of Contents

Introduction	5
General Precautions	7
Warnings	8
What's in the Box?	10
Vehicle Installation	13
Location	14
Mounting the <i>PowerConnect</i> Vehicle Dock	16
Installing the Magnetic Antenna	21
Connecting the <i>PowerConnect</i> Power Adapter	38
Connecting Your Starmate 7 to Your Vehicle's Audio System	39
Subscribing to the SiriusXM Service	49
Controls	51
<i>PowerConnect</i> Vehicle Dock Reference Guide	54
Operation	55
Display Screen Information	56
Changing Channels and Categories	57
My Channels Category	58
Display (Disp) Button	60
Selecting Channels Directly	61
Channel Presets (Band Button)	62
Memory (Memo) and Song Seek (S-Seek) Functions	64
Jump Button	71
FM Presets Button	72
Menu Options	75
Sirius ID	76
FM Transmitter	77
Settings	78
Memory Options	82
Parental Control	84

Table of Contents

Time Based Features	86
Signal Indicator	91
Factory Default	92
Troubleshooting	95
Product Specifications	97

Introduction

Here's your new Starmate 7 Radio

Your new Starmate 7 Radio comes with everything you need to enjoy SiriusXM in your car. And with available SiriusXM accessories you can use your Starmate 7 just about anywhere.

Your new Starmate 7 gives you powerful features:

- Memo function – Store up to 30 favourite songs and artists plus a favourite sports team or NASCAR® car and get an alert whenever they're playing on any channel.
- Easy-to-read wide-angle 5-line display.
- *PowerConnect* so you can listen to SiriusXM through your car's FM stereo. An FM Presets button makes transmitter frequency changes quick and easy.

Use this manual to familiarize yourself with all of your Starmate 7's features and capabilities. For the latest information about your Starmate 7 and other SiriusXM products and accessories, visit www.siriusxm.ca.

General Precautions

Liquid Crystal Precautions

If the LCD screen on the radio is damaged, do not touch the liquid crystal fluid. If any of the following situations happen, take the action indicated:

- 1** If the liquid crystal fluid comes in contact with your skin, wipe the skin area with a cloth and then wash the skin thoroughly with soap and running water.
- 2** If the liquid crystal fluid gets into your eye, flush the eye with clean water for at least 15 minutes. Seek medical care.
- 3** If the liquid crystal fluid is ingested, flush your mouth thoroughly with water. Drink large quantities of water and induce vomiting. Seek medical care.



Safety Precautions

Be sure to observe the following warnings. Failure to follow these safety instructions and warnings may result in a serious accident.

- Do not operate your Starmate 7 in a way that might divert your attention from driving safely. As a driver, you alone are responsible for safely operating your vehicle in accordance with traffic safety laws at all times.
- Do not install the unit where it may obstruct your view through the windshield, or of your vehicle's indicator displays.
- Do not install the unit where it may hinder the function of safety devices such as an airbag. Doing so may prevent the airbag from functioning properly in the event of an accident.
- Be sure the unit is installed as described in the installation instructions which accompany each accessory kit. Sirius XM Canada Inc. is not responsible for issues arising from installations which were not installed

Introduction

according to the instructions.

- Before attaching the suction cup mount to your windshield, you should check your state and local laws for regulations regarding mounting this device on your windshield.
- To avoid short circuits, do not open the unit, and never put or leave any metallic objects (coins, tools, etc.) inside the unit.
- If the unit emits smoke or unusual odors, turn the power off immediately, and disconnect the unit from any power source.
- Do not drop the unit or subject it to strong shocks.
- If the unit doesn't seem to be working properly, turn the unit off, wait 10 seconds and then turn it on again.
- The installation and use suggestions contained in this manual are subject to any restrictions or limitations that may be imposed by applicable law. The purchaser should check applicable law for any restrictions or limitations before installing and/or operating this unit.



Warnings

Operating Temperature

The Starmate 7 is designed to operate between -20° to $+85^{\circ}$ C (-4° to $+185^{\circ}$ F). Avoid leaving the radio in a vehicle or elsewhere where the temperature may fall outside this range. Extreme temperatures or extreme temperature fluctuations can degrade the performance of the LCD display screen, and possibly damage it.

Cleaning and Maintenance

If the radio or accessories become dirty, turn the power off and wipe it clean with

a soft cloth. Do not use hard cloths, strong cleaning fluids, paint thinner, alcohol, or other volatile solvents to clean. These may cause damage to the radio.


***PowerConnect* Power Adapter**

The *PowerConnect* Vehicle Dock cannot be powered directly from a vehicle's 12VDC power system. It must be powered from the vehicle's cigarette lighter or similar power port using the included *PowerConnect* Power Adapter. Connecting the *PowerConnect* Vehicle Dock directly to the vehicle's 12VDC power system may result in damage to the *PowerConnect* Vehicle Dock or Starmate 7 Radio, or both.


Introduction

What's in the Box?


The following items are included with your purchase of the Starmate 7 radio:

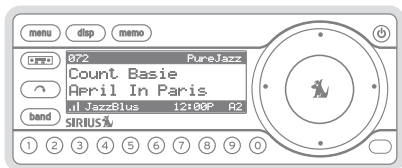


Starmate 7 Radio

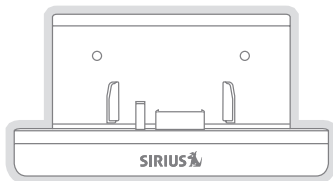


PowerConnect Vehicle Dock

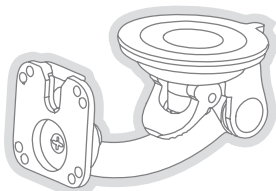


Suction Cup Mount

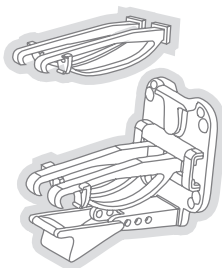

Vent Mount &
Extended Vent Hooks

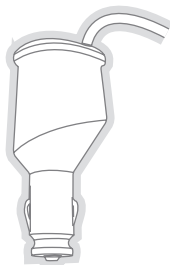

PowerConnect
Power Adapter

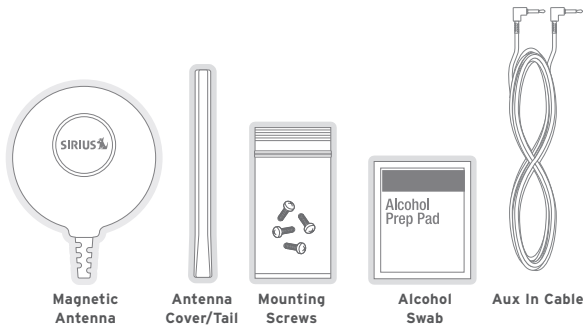

Unpack your Starmate 7 radio carefully and make sure that everything shown is present. If anything is missing or damaged, or if your the radio fails to operate, notify your dealer immediately. We recommend that you retain the original carton and packing materials in case you need to ship your radio in the future.



Vehicle Installation

Vehicle Installation

Location

When installing the *PowerConnect* Vehicle Dock in your vehicle, choose a location in your vehicle where it will not block your vision, interfere with the vehicle controls, or obstruct the air bag. The location should be easily accessible and provide good visibility of the display, and should not be located where it will be in direct sunlight which will affect the visibility of the display screen.

The illustrations on the following page shows two examples of the Starmate 7 mounted in a vehicle: **A** is the dash mount method, and **B** is the vent mount method using the vent mount clip.

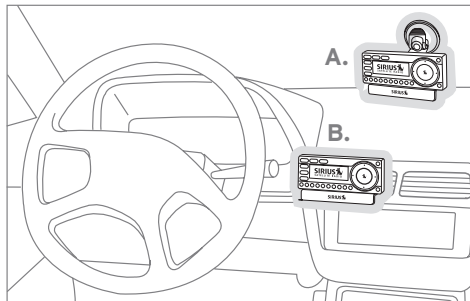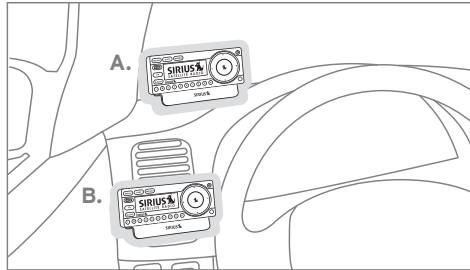


Depending upon the mounting location you select in your vehicle, the mount should be attached to the dock and installed as described in the following sections.

Vehicle Installation

Mounting the *PowerConnect* Vehicle Dock

Suction Cup Mount Method (A)


The suction cup mount may be attached to any smooth surface. Before attaching the suction cup mount to your windshield, you should check your state and local laws for regulations regarding mounting this device on your windshield.

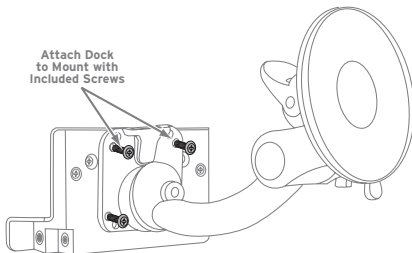

To mount the dock using the suction cup mount, assemble the mount as follows:

- 1** Attach the dock to the suction cup mount using the provided screws.
- 2** Clean the area where you are attaching the suction cup with the supplied alcohol wipe.

- 3** Be sure the cam lever is up and position the suction cup mount on the windshield or other location you which have chosen. Press the cam lever all the way down towards the base of the mount until it locks to adhere the suction cup. (To unlock the suction cup, lift the lever up.)

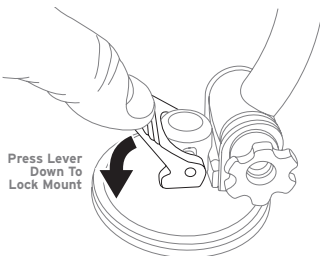


Vehicle Installation


Vent Mount Method (B)

To mount the dock using the vent mount, install the vent mount as follows:


- 1 If the vent louvers in your vehicle are recessed, you may need to use the supplied longer vent hooks with the vent mount. Install the longer vent hooks into the vent mount and be sure to observe the orientation of the vent hooks as shown.

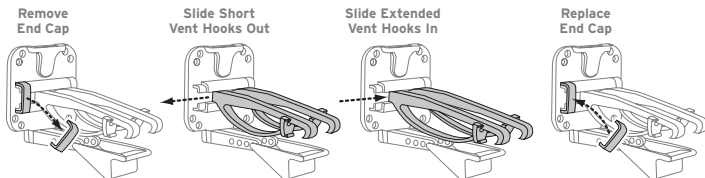

- 2 Attach the vent mount to the dock using the provided screws.

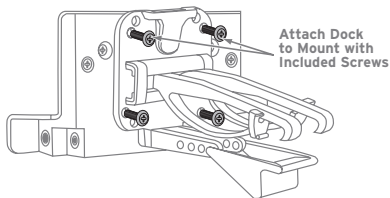


- 3** Attach the vent mount to a heating/air conditioning vent in your vehicle. Position the two tension springs A against a vent louver B. Then push the vent mount into the vent, far enough so that the hooks C drop down and hook the rear of the vent louver. Once you are sure that the hooks have grasped a vent louver, the tension springs A will keep the vent mount hooked to the louver.

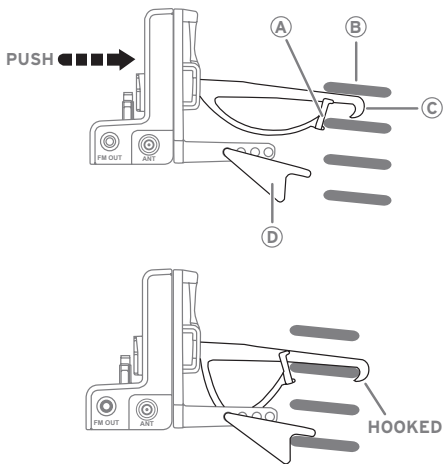

Vehicle Installation

- 4 The angle of the dock may be changed by changing the position of foot D on the vent mount to a different adjustment hole.

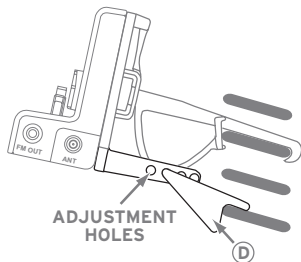

Installing the Magnetic Antenna

Caution

Because adhesive is used in the installation of the Rubber Antenna Cover/Tail, we recommend that you install the antenna at or above room temperature (68° F). The adhesive on the Rubber Cover/Tail may not adhere properly to the vehicle roof at temperatures lower than this. Warmer temperatures will also make it easier to route of the antenna cable through the rubber molding around the windows and in other areas in the vehicle. Maximum adhesion usually occurs within 72 hours at room temperature, so you should avoid car washes as well as other contact with the antenna and Rubber Cover/Tail during this 72 hour period.



Warning

Be sure not to cut, damage, or puncture the external jacket of the antenna cable during the installation procedure. Damage to the antenna cable can degrade the SiriusXM signal or make it unavailable, and can also cause water to intrude via the cable into the antenna causing the antenna to fail.

Do not lengthen or shorten the antenna cable by cutting it. Doing so will cause the antenna to not function properly.

Installation


Installing the magnetic antenna consists of two steps:

- Mounting the magnetic antenna and Rubber Antenna Cover/Tail on the vehicle
- Routing the antenna cable through the vehicle to the Vehicle Dock

Vehicle Installation

Antenna Mounting

The Magnetic Mount Vehicle Antenna has a strong magnetic mount designed to hold it in place during normal driving conditions (highway/city). This also makes the antenna easy to remove for transferring it to other vehicles.

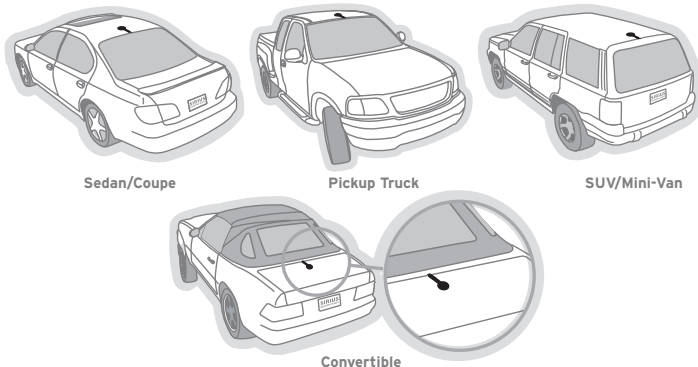

The above illustration shows the optimal mounting location for the antenna on several types of vehicles. These mounting positions should be observed when installing the antenna:


- **Sedan/Coupe/SUV/Mini-Van:** Install the antenna at the rear center of the roof, near the rear window.
- **Pickup Truck:** Install the antenna at the front center of the roof, near the windshield.
- **Convertible:** Install the antenna at the front center of the trunk lid, near the rear window.

The antenna needs to have an unobstructed area of 3 inches by 3 inches around it. It is important to mount the antenna where no obstructions will block the antenna from receiving the SiriusXM signal. Objects which can obstruct the antenna could be a roof rack, a sunroof, a roof-mounted cargo container, another antenna, etc. If your vehicle has a potential obstruction, be sure that the antenna is mounted at least 3 inches away from it (but no closer than 3 inches from the roof edge, or trunk lid in the case of a convertible).

Note: Read the *Do* and *Do Not* installation tips beginning on page 33 for additional antenna installation information.

Follow this procedure to mount the antenna:

- 1** Select an appropriate mounting position for your type of vehicle that has an unobstructed area of 3 inches by 3 inches around the antenna.
- 2** Attach the Rubber Cover/Tail to the antenna, as shown, and press the antenna cable into the rubber cover/tail. The Rubber Cover/Tail will help to position the antenna the correct distance from the edge of the roof or trunk lid.

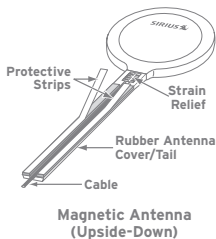

- 3** Clean the surface area of the vehicle where you will be installing the antenna with the alcohol prep pad.

Vehicle Installation

- 4 Peel the protective material from the adhesive strips and press the Rubber Cover/Tail firmly into place on the vehicle.
- 5 Double check that the location of the antenna and Rubber Cover/Tail are correct, and continue to press firmly down on the Rubber Cover/Tail for another 30 seconds. At room temperature (68° F), maximum adhesion usually occurs within 72 hours. During this period, avoid car washes and other contact with the antenna and the Rubber Cover/Tail.


Cable Routing

After you have mounted the antenna you can route the antenna cable to the Vehicle Dock. Separate antenna cable routing procedures are provided for each type of vehicle: Sedan/Coupe, Pickup Truck, SUV/Mini-Van and Convertible.

Note that additional breakout illustrations for each step of the antenna cable routing procedures can be found on the SiriusXM website at www.siriusxm.ca/install.

Sedan/Coupe Antenna Cable Routing Procedure

The following illustration shows how the antenna cable should be routed from the antenna to your Starmate 7 Radio in a sedan/coupe.

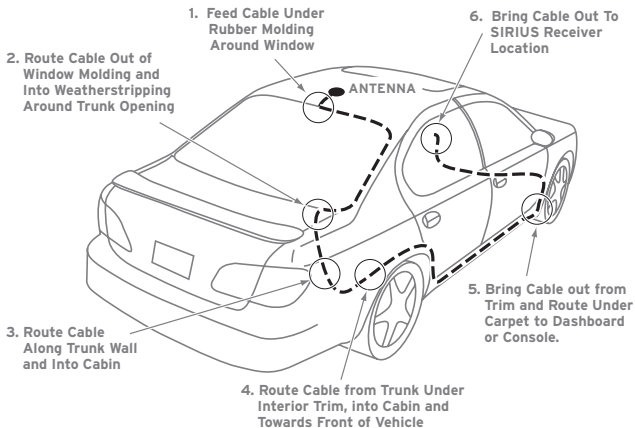


Vehicle Installation

Follow these detailed cable installation instructions:

- 1** Feed the cable from the antenna underneath the rubber molding around the rear window. Use a plastic putty knife or similar object to lift the rubber molding around the rear window and tuck the antenna cable underneath the molding. Route the antenna cable around and down the window to the lowest point. If your rear window does not have rubber molding, SiriusXM recommends consulting with a professional installer.
- 2** Route the antenna cable out of the window molding and into the rubber weather stripping around the trunk opening. Lift the weather stripping from the opening and tuck the cable inside it, then replace the weather stripping. To avoid sharp bends in the cable, run the cable inside of the weather stripping for a few inches, then remove the cable from the weather stripping inside of the trunk. Keep the cable away from hinges, gears, etc., that could damage it.
- 3** Route the cable out from the rubber weather stripping and along the trunk wall. Continue routing the cable into the cabin through a conduit or along an existing wiring harness.
- 4** Route the cable through the main cabin area under the interior trim, towards the front of the vehicle. Use the plastic putty knife to lift the plastic trim just enough to tuck the cable under underneath. Avoid side airbag locations on back pillars and above the doors. (Airbag locations are marked with "SRS" logos.) Be careful not to crimp or cut the cable.
- 5** Bring the cable out from the trim near the firewall and route it under the carpet toward the dashboard or console. Coil any excess cable in a hidden location, such as under the carpet, keeping it away from any vehicle pedals or controls. Secure the excess cable with wire ties.
- 6** Bring the end of the cable out at the Vehicle Dock location. Leave yourself enough cable so you can easily connect it to the antenna connector on the Vehicle Dock.

Pickup Truck Antenna Cable Routing Procedure

The following illustration shows how the antenna cable should be routed from the antenna to your Starmate 7 Radio in a pickup truck.

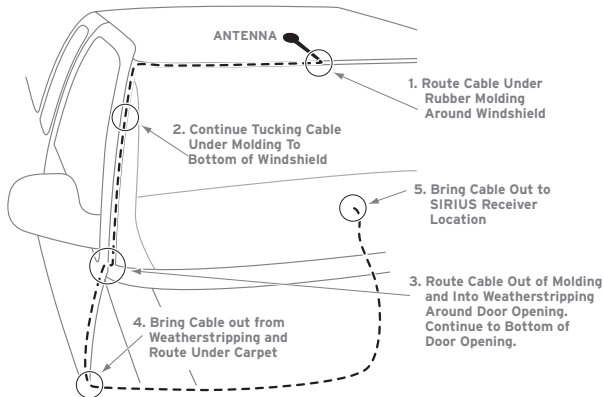

Vehicle Installation

Follow these detailed cable installation instructions:


- 1** Use a plastic putty knife or similar tool to lift the rubber molding around the windshield and tuck the antenna cable underneath it.
- 2** Continue tucking the cable underneath the windshield molding around the windshield to the lowest corner.
- 3** At the lowest corner of the windshield, route the cable out of the windshield molding and into the rubber weather stripping around the door opening. Lift the weather stripping from the opening and tuck the cable inside it, then replace the weather stripping. Run the cable inside of the weather stripping to the bottom of the door opening.
- 4** Pull the cable out of the weather stripping at the bottom of the door opening and route it under the carpet toward the dashboard. Coil any excess cable in a hidden location, such as under the carpet, keeping it away from any vehicle pedals or controls. Secure the excess cable with wire ties.
- 5** Bring the end of the cable out at the Vehicle Dock location. Leave yourself enough cable so you can easily connect it to the antenna connector on the Vehicle Dock.

SUV/Mini-Van Antenna Cable Routing Procedure

The following illustration shows how the antenna cable should be routed from the antenna to your Starmate 7 Radio in an SUV or a Mini-Van.

1. Feed Cable Under Rubber Seal Around Hatch Opening

4. Bring Cable Out To SIRIUS Receiver Location

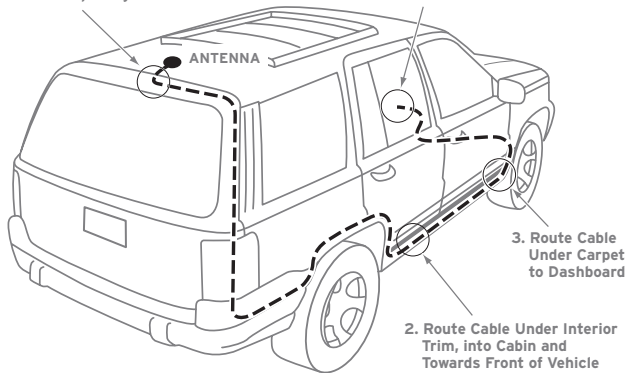

3. Route Cable Under Carpet to Dashboard

2. Route Cable Under Interior Trim, into Cabin and Towards Front of Vehicle


Vehicle Installation

Follow these detailed cable installation instructions:

- 1** Feed the antenna cable underneath the rubber weather stripping of the rear tailgate window/door and route the cable along the rear hatch. Lift the weather stripping from the opening and tuck the cable inside it, then replace the weather stripping. Pull the cable out from weather stripping and route it into the cabin under the interior trim. Avoid hinges or gears that could crimp or cut the cable.
- 2** Route the cable through the SUV's main cabin area under the interior trim, towards the front of the vehicle. Use a plastic putty knife to lift the plastic trim just enough to tuck the cable under underneath. Avoid side airbag locations on back pillars and above the doors. (Airbag locations are marked with "SRS" logos.) Be careful not to crimp or cut the cable.
- 3** Bring the cable out from the trim near the firewall and route it under the carpet toward the dashboard or console. Coil any excess cable in a hidden location, such as under the carpet, keeping it away from any vehicle pedals or controls. Secure the excess cable with wire ties.
- 4** Bring the end of the cable out at the Vehicle Dock location. Leave yourself enough cable so you can easily connect it to the antenna connector on the Vehicle Dock.

Convertible Antenna Cable Routing Procedure

The following illustration shows how the antenna cable should be routed from the antenna to your Starmate 7 Radio in a convertible.

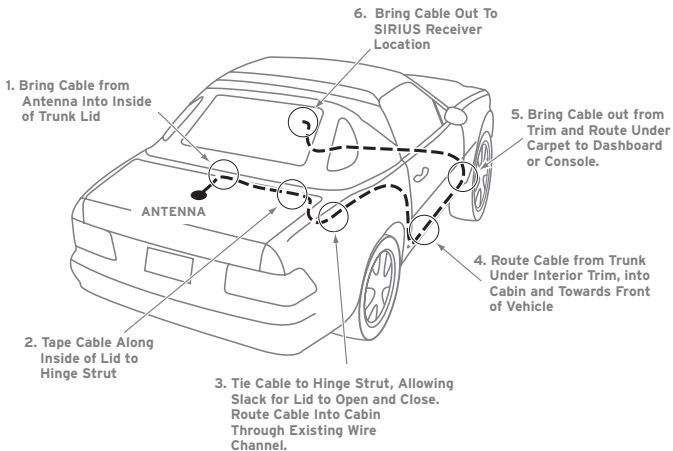



Vehicle Installation

Follow these detailed cable installation instructions:

- 1** Bring the cable from the antenna into the trunk at the front edge of the trunk lid. Keep any bends in the cable loose.
- 2** Tape or tie the cable along the inside of the trunk lid to the trunk lid hinge strut. Allow enough slack in the cable so the trunk lid can easily open and close and keep the cable away from hinges, gears, etc., that could crimp or cut it.
- 3** Route the cable along the trunk wall and into the cabin through a conduit or along an existing wiring harness.
- 4** Route the cable through the main cabin area under the interior trim, towards the front of the vehicle. Use a plastic putty knife to lift the plastic trim just enough to tuck the cable under underneath. Avoid side airbag locations on back pillars and above the doors. (Airbag locations are marked with "SRS" logos.) Be careful not to crimp or cut the cable.
- 5** Bring the cable out from the trim near the firewall and route it under the carpet toward the dashboard or console. Coil any excess cable in a hidden location, such as under the carpet, keeping it away from any vehicle pedals or controls. Secure the excess cable with wire ties.
- 6** Bring the end of the cable out at the Vehicle Dock location. Leave yourself enough cable so you can easily connect it to the antenna connector on the Vehicle Dock.

Tips


The following **DO** and **DO NOT** antenna mounting tips illustrate how to install the antenna for optimal performance, and also illustrate where the antenna should not be installed.

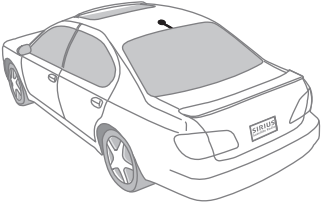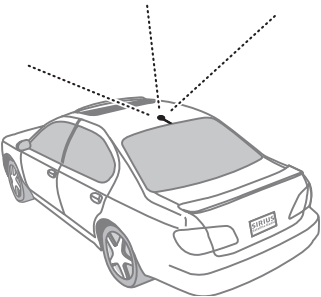DO	Mount the antenna on the roof, at least 3 inches from the edge.	 A line drawing of a sedan from a rear three-quarter view. A small antenna is mounted on the roof, positioned close to the rear edge of the roofline.
DO	Mount the antenna on the roof where it has a clear view of the sky in all directions.	 A line drawing of a sedan from a rear three-quarter view. An antenna is mounted on the roof. Three dashed lines radiate from the antenna in different directions, indicating a clear view of the sky in multiple directions.

Vehicle Installation


DO



Mount the antenna on the roof where it has at least 3 inches of clear space around it.

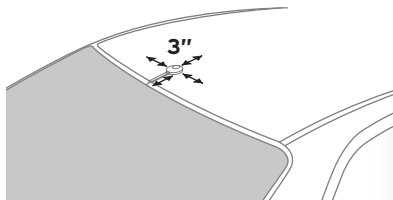



DO

Use the supplied Rubber Tail Cover to protect the antenna cable.

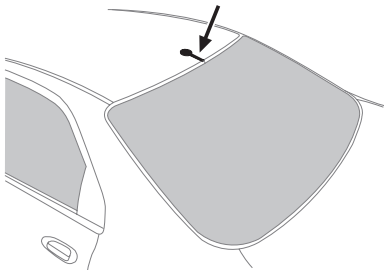

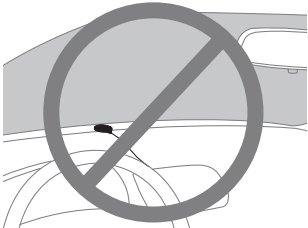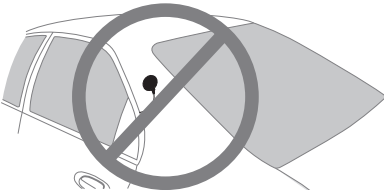
DO NOT	Don't mount the antenna inside the vehicle, for example, on the dashboard.	
DO NOT	Don't mount the antenna on any of the vehicle's front, back or side pillars.	

Vehicle Installation

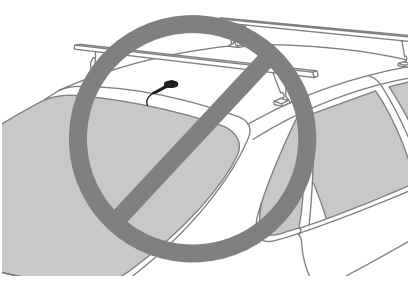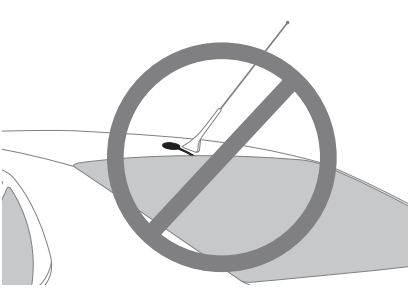
<p>DO NOT</p>	<p>Don't mount the antenna close to a roof rack. Adjust the rack so it's further away from the antenna or move the antenna closer to the center of the roof.</p>	
<p>DO NOT</p>	<p>Don't mount the antenna close to another antenna. Mount it at least 3 inches away.</p>	

**DO
NOT**

Don't mount the antenna closer than 3 inches from the edge of the roof. Use the supplied rubber tail/cover as a guide for judging proper length and correct positioning.

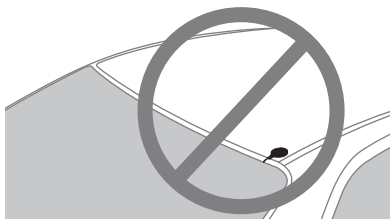


After you've routed the cable to the *PowerConnect Vehicle Dock*, connect the antenna cable to the Ant connection on the right side of the *PowerConnect Vehicle Dock*.

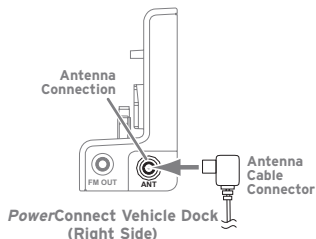

Vehicle Installation

Connecting the *PowerConnect* Power Adapter

Connect the provided *PowerConnect* Power Adapter to the 5VDC connector on the left side of the *PowerConnect* Vehicle Dock.

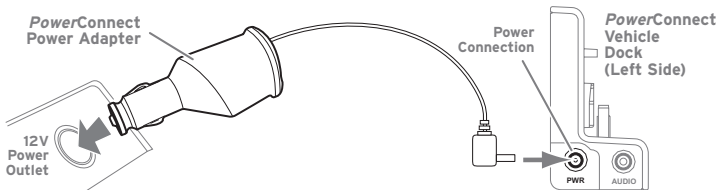

Note: Do not power the *PowerConnect* Vehicle Dock directly from your vehicle's 12VDC power system without using the *PowerConnect* Power Adapter. This could damage the *PowerConnect* Vehicle Dock, your Starmate 7 Radio or both.

Connecting Your Starmate 7 to Your Vehicle's Audio System

To play audio through your vehicle's stereo or FM radio, decide on one of the following audio connection options:

- **Option 1: Best:** Use the included **Aux In Cable** if your vehicle's stereo system has an auxiliary input connection. Refer to your vehicle's owners manual to find the location of the auxiliary input jack, or consult the vehicle dealer.

Tip

The auxiliary input jack may be located on the face plate of the vehicle radio, on the back of the radio, anywhere on the front dash panel, inside the glove compartment, or inside the center console in between the front seats.


- **Option 2: Better:** Use a **Cassette Adapter** if your vehicle has a built-in cassette player. Cassette Adapters are sold separately and can be purchased from an electronics retailer, or go to www.siriusxm.ca.
- **Option 3: Good:** Use the **PowerConnect** feature in the Starmate 7. **PowerConnect** plays the audio through your vehicle's FM radio.
- **Option 4: Best:** Use the **FM Direct Adapter**. If none of the previous three audio connection options will work in your vehicle, then you will need to use the FM Direct Adapter (FMDA25C) (sold separately). The FMDA25C needs to be installed by a professional installer and directly connects your radio to your vehicle's FM radio. To learn more, check with the retailer where you bought your radio, or go to www.siriusxm.ca.

Follow the installation instructions in the next several sections for the audio connection option that you have selected.


Vehicle Installation

Option 1: Aux In Cable Installation Instructions

- 1 Plug one end of the Aux In Cable into the **green AUDIO** connector on the dock.

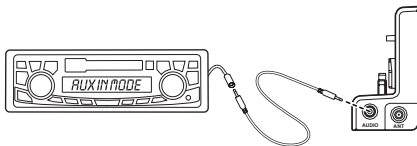


- 2 Plug the other end into the auxiliary input jack connection of your vehicle's stereo system.
- 3 Insert your Starmate 7 into the dock, aligning the rails on the dock fit into the mounting slots in the back of the radio.

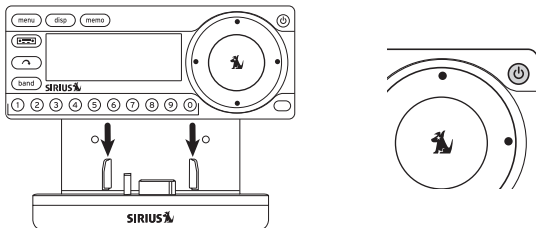

- 4 Power on your Starmate 7 by pressing the Power button.
- 5 Be sure the vehicle is outside and the antenna has a clear view of the sky.

 Verify that you are receiving the SiriusXM signal. There should at least be one bar on the lower left corner of the main display screen that denotes antenna signal strength. You can also press and hold **menu** and then press the Down button to scroll to and highlight **Signal Indicator**. Press the **Select button**. The Satellite and Terrestrial bars show the strength of the signal being received. If the signal reception is good, press and hold **menu** to return to the main display screen. You are ready to make the audio connection.




- 6 Ensure that the Starmate 7 is tuned to channel 184. Upon power up, the Starmate 7 should tune to channel 184 by default, when it's not yet activated. If it's not on channel 184, refer to "Operation" on page 56 to learn about how to tune a channel.
- 7 Turn on your vehicle's stereo system. Set it to play input from the auxiliary input source.
- 8 You should hear Sirius channel 184 through your vehicle's stereo system. You are now ready to subscribe your Starmate 7.
- 9 The audio level output of the Starmate 7 can be increased or decreased as necessary to match the audio levels of other sources in your vehicle. Refer to "Audio Level" on page 83.

If the signal reception is good, but there is no audio when tuned to channel 184, be sure the vehicle's stereo system is set to the correct source, i.e., auxiliary input source (step 7). Also be sure that the audio level is set high enough to be heard (step 9). Refer to "Troubleshooting" on page 96 for additional help.


Vehicle Installation

Option 2: Cassette Adapter Installation Instructions

- 1 Plug the Cassette Adapter into the green AUDIO connector on the dock.

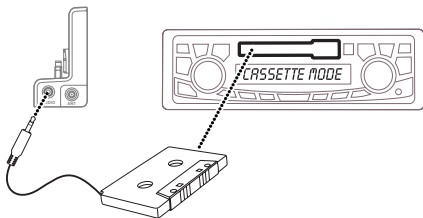


- 2 Insert the Cassette Adapter in the vehicle's cassette deck. You may need to turn on your vehicle's stereo system in order to do so.
- 3 Insert your Starmate 7 into the dock, aligning the radio against the rear of the dock so that the rails on the dock fit into the mounting slots in the back of the radio.

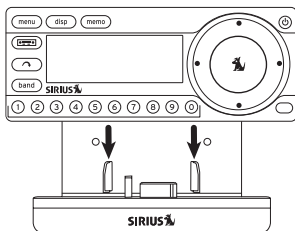

4 Power on your Starmate 7 by pressing the Power button.

 5 Be sure the vehicle is outside and the antenna has a clear view of the sky. Verify that you are receiving the SiriusXM signal. There should be at least one bar on the bottom left corner of the main display screen that denotes antenna signal strength. You can also press and hold **menu** and then press the Down button to scroll to and highlight **Signal Indicator**. Press the **Select** button. The Satellite and Terrestrial bars show the strength of the signal being received. If the signal reception is good, press and hold **menu** to return to the main display screen. You are ready to make the audio connection.



6 Ensure that the Starmate 7 is tuned to channel 184. Upon power up, the Starmate 7 should tune to channel 184 by default, when it's not yet activated. If it's not on channel 184, refer to "Operation" on page 56 to learn about how to tune a channel.

7 If you haven't done so, turn on your vehicle's stereo system. Set it to play input from the cassette source.

8 You should hear Sirius channel 184 through your vehicle's stereo system. You are now ready to subscribe your Starmate 7.



9 The audio level output of the Starmate 7 can be increased or decreased as necessary to match the audio levels of other sources in your vehicle. Refer to "Audio Level" on page 83.

If the signal reception is good, but there is no audio when tuned to channel 184, be sure the vehicle's stereo system is set to the correct source, i.e., cassette source (step 7). Also be sure that the audio level is set high enough to be heard (step 9). Refer to "Troubleshooting" on page 96 for additional help.

Vehicle Installation

Option 3: PowerConnect Installation Instructions

 - 1 Insert your Starmate 7 into the dock, aligning the radio against the rear of the dock so that the rails on the dock fit into the mounting slots in the back of the radio.)
- 2 Power on Starmate 7 radio by pressing the **Power button**.
- 3 Be sure the vehicle is outside and the antenna has a clear view of the sky. Verify that you are receiving the SiriusXM signal. There should at least be one bar on the lower left corner of the main display screen that denotes antenna signal strength. You can also press and hold **menu** and then press the Down button to scroll to and highlight **Signal Indicator**. Press the **Select button**. The Satellite and Terrestrial bars show the strength of the signal being received. If the signal reception is good, press and hold **menu** to return to the main display screen. You are ready to make the audio connection.

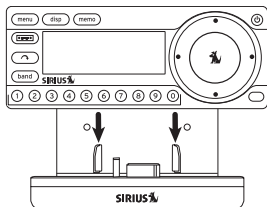

- 4 You'll first need to find an available FM channel. An available FM channel is one that's not being used by an FM radio station in your area. When you tune your FM radio to an available channel, you should only hear static or silence - not talk or music. We recommend one of the following methods to find an available FM channel:
 - a. Use the SiriusXM FM Channel Finder at www.siriusxm.ca. Go to the website and enter your postal code. The Channel Finder will suggest a list of available FM channels in your area. For convenience, write down

or print out the list.


OR

- b. Manually tune through your local FM channels on your vehicle's FM radio. Locate and create a list of channels that aren't being used by any FM radio station. Write down the list. Once you have created your list of available FM channels, you will need to find the one that provides the best match for your Starmate 7.

Tip

You'll need to use the 'Manual' tune function on your vehicle's FM radio to tune through every FM channel one-by-one. Turn on your vehicle's FM radio. Start at 88.1 and use the 'Manual' tune function on your vehicle's FM radio to tune through each FM channel one-by-one (88.1 followed by 88.3 etc.) to locate channels that aren't being used by a local FM radio station. Write down each FM channel that has only static or silence on it, until you reach 107.9.

- 5 Ensure that the Starmate 7 is tuned to channel 184. Upon power up, the Starmate 7 should tune to channel 184 by default, when it's not yet activated. If it's not on channel 184, refer to "Operation" on page 56 to learn about how to tune a channel.
- 6 Pick the first FM channel on your list from step 4. Turn on your vehicle's FM radio (if you have not already done so) and tune it to this FM channel.
- 7 Set your Starmate 7 to transmit on the same FM channel that you have selected in step 4:

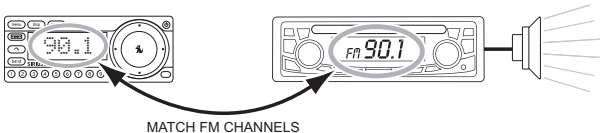

Vehicle Installation

- i. Press the Down button to scroll and highlight **FM Transmitter** and press the Select button.
- iii. **FM Presets** will be highlighted. Press the Select button.
- iv. Press the Down button to scroll and highlight the storage location **FM2**. Press the Select button.
- v. Tune to the FM channel you found in step 3. Press the Up or Down button to tune in steps of .2, i.e., 99.3 to 99.5. Press the Left or Right button to tune in steps of 1, i.e., 99.3 to 100.3. When the desired FM channel is displayed on screen, press the Select button to select the FM channel.
- vi. The FM channel you selected will be confirmed on the display screen. The Starmate 7 will tune to the FM channel.

FM Presets	
FM1	88.1 MHz
FM2	<EMPTY>
FM3	<EMPTY>
FM4	<EMPTY>

FM2 Frequency
90.1 MHz

FM Presets	
FM1	88.1 MHz
FM2	90.1 MHz
FM3	<EMPTY>
FM4	<EMPTY>


- 8 You should hear Sirius channel 184 through your vehicle's FM radio. If you are satisfied with the sound quality, you're done! You are now ready to activate your Starmate 7.
- 9 If the selected FM channel doesn't work well for you, work down the list of FM channels until you find one that allows you to hear SiriusXM clearly. Each time, you will need to tune your vehicle's FM radio to the FM channel and then set your Starmate 7 to transmit on the same FM channel (steps 6 & 7).

If the signal reception is good, but there is no SiriusXM audio when tuned to channel 184, verify that both the radio and your vehicle's FM radio are tuned

to the same FM channel (steps 6 & 7). Also ensure the chosen FM channel is a suitable one to use in your area (step 4). Verify that nothing is plugged into the **AUDIO** connector on the *PowerConnect Vehicle Dock*. Refer to “Troubleshooting” on page 96 for additional help.

Option 4: FM Direct Adapter (FMDA) Installation

The FMDA needs to be installed by a professional installer. Professional installation can help improve your radio's reception and significantly reduce the visibility of wires. To learn more, check with the retailer where you bought your radio, or go to www.siriusxm.ca.

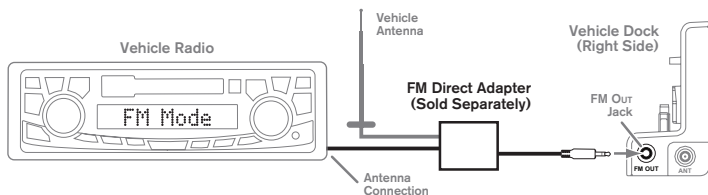

Subscribing to the SiriusXM Service

Subscribing to the SiriusXM Service

 
 
 
The Starmate 7 works on the Sirius network and requires a Sirius subscription. Before you can start listening, please do the following:

- 1 Be sure that your Starmate 7 is correctly installed, is properly docked in the Vehicle Dock, and that the antenna is oriented to receive the SiriusXM signal.
- 2 Turn on the Starmate 7. After the startup sequence, it will update the channel line-up. Wait until the channel updates have completed before pressing any buttons.
- 3 Once the channels have been updated, the radio will automatically tune to channel 184 and the display will change to Call 1-888-539-SIRIUS to Subscribe. You will not be able to listen to any other channels until you activate your SiriusXM subscription.
- 4 Use the Channel UP/DOWN buttons to tune to channel 0 to display your Starmate 7's unique 12-digit Sirius ID number (SID). Write the SID number down.

The SID number is also available on your Starmate 7's packaging, and may also be accessed by pressing the FM Presets/Menus button and selecting Sirius ID.


- 5 Have your credit card handy and visit www.siriusxm.ca/activate and follow the prompts to activate your subscription. You can also call Sirius Customer Care toll-free at: 1-888-539-SIRIUS (1-888-539-7474).
- 6 When you have successfully subscribed your Starmate 7 will display an alert message. To continue, press any button.

You are now ready to begin enjoying SiriusXM!



Starmate 7 Front Panel

This section identifies and describes your Starmate 7's buttons and controls.

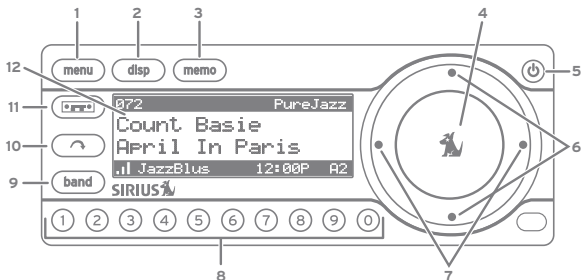


- 1 Menu Button:** Accesses Menu options to make setup and feature changes.
- 2 Display (Disp) Button:** Toggles the Default display screen between the normal display mode and large text display mode (see page 61). Pressing and holding switches the display to the My Channels screen (see page 60).
- 3 Memory (Memo) Button (S-Seek Function):** Saves and recalls artist names, song titles, and sports teams. You can store up to 30 artist/song title combinations, including your favourite sports teams/cars and traffic channels. Pressing and holding the Memo button will enter the recall mode, displaying the stored information.
- 4 Select Button:** Selects items highlighted on the display screen. When the Default screen is displayed, a press-and-release of the Select button will display a prompt to enter a channel number. Pressing and holding will return to the last channel played.

- 5 Power Button:** Turns the Starmate 7 On and Off.
- 6 Channel Up/Down Buttons:** Navigate through channels and display screens, and highlight items on the display.
- 7 Category Left/Right Buttons:** Navigate through the Category List screens, which display SIRIUS channel categories. Pressing and holding the buttons provides a shortcut for adjusting the display's brightness without having to enter the Menu Options (see "Display Options" on page 79).
- 8 Preset Number Buttons (0 - 9):** Set and select preset channels. Also used to directly tune channels by entering the channel number.
- 9 Band Button:** Pressing and releasing this button switches between preset banks A, B, and C, which hold 10 presets each for a total of 30. Pressing and holding this button switches to the My Presets category, which lets you see what artists and songs are playing on each of your stored presets.
- 10 Jump Button:** Quickly switches between the current channel and a favourite (or frequently-accessed) channel.
- 11 FM Presets Button:** Selects between different preset frequencies used by the built-in wireless FM transmitter.
- 12 LCD Display Screen:** Provides information about the Starmate 7's operation, the program that is playing and other programming that is available.

Controls

PowerConnect Vehicle Dock Reference Guide

The following section identifies and describes the *PowerConnect* Vehicle Dock's features and connectors.

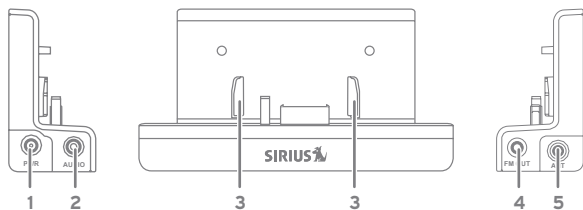


- 1 DC5V Power Connector:** Power connection for the supplied *PowerConnect* Power Adapter (see page 38).
- 2 Audio Out (Audio) Connector:** Audio output for directly connecting to your vehicle's audio system (see page 40-43).
- 3 Docking Rails:** Fit-into slots in the back of the Starmate 7 to secure it while it is docked (see page 40).
- 4 FM Out Connector:** FM output for use with the optional FM Direct Adapter (see page 44).
- 5 Antenna (Ant) Connector:** Connection for the supplied magnetic antenna (see page 37).

Operation

Display Screen Information

Your Starmate 7's 5-line LCD display screen provides information about the operation of the radio, such as the currently-tuned channel, song or show being played, artist name, time and other information. This screen is referred to as the **Default** screen in this manual.

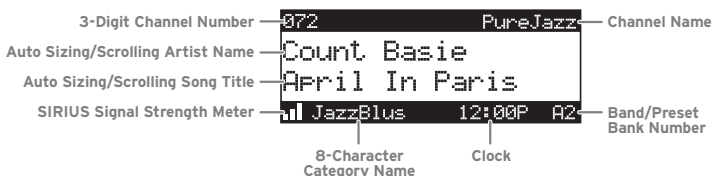

Whenever you power your Starmate 7 On, the previously-selected channel will automatically begin playing, and the currently-playing artist name and song title will be displayed.

Changing Channels and Categories


Pressing the Channel up or down button will immediately tune to the next or previous subscribed channel.

Pressing the Category LEFT or RIGHT button once will display a list of the subscribed channels in the current category, highlighting the currently-tuned channel. This is the Category List mode.

Pop	
005	Sirius Gold
006	60's Vibrations
007	Totally '70s
008	Bis '80s

Pressing the Category LEFT or RIGHT button again will display a listing of the previous or next channel category.

If you repeatedly press the Disp button while in the Category List mode, the display will sequence between listings of currently-playing artist names, song titles, and back to channel names within the current category.

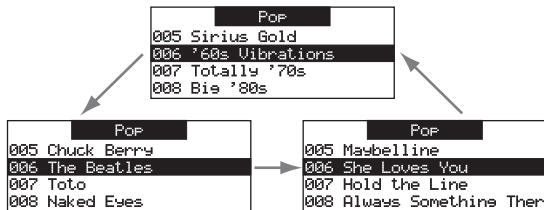

Operation

Use the Channel UP/DOWN buttons to highlight a channel within a category and press the Select button to tune to the highlighted channel. When you tune to a new channel, the display will revert to the Default screen for the new channel.

To exit the Category List mode without changing to a different channel, press-and-hold the Disp button for at least 1 second until the Default screen is displayed.

My Channels Category

The first category displayed in the Category List mode is a My Channels category that will show all of the channels contained in your Sirius subscription plan. The category heading bar will show the total number of channels to which your Starmate 7 is subscribed.



Use the Channel UP/DOWN buttons to highlight a channel and press the Select button to listen to the highlighted channel.

- Channels that have been locked using the Parental Control feature (see “Parental Control” on page 84) will be displayed with a padlock icon next to the channel name.
- If you try to tune to an unsubscribed channel the Starmate 7 will display a “Channel Unsubscribed” message.
- The Starmate 7 will not display channel information for any unsubscribed or locked channels.
- The Memory and Song Seek functions (see “Memory (Memo) and Song Seek (S-Seek) Functions” on page 64) will only occur on subscribed channels.

- All of the Category List screens and Channel List screens (see page 57) will only display subscribed channels that have not been locked using Parental Control.


For information about your subscription, go to www.siriusxm.ca.

Operation

Display (Disp) Button

Pressing and holding the Disp button for 1½ seconds will also activate the My Channels screen (see page 58). The My Channels screen makes it easy to quickly search for and locate music on any of your subscribed channels by channel, by artist, and by song title.

When the My Channels screen is active, the Starmate 7 displays a listing of all your subscribed channel numbers and names. Repeated momentary pressing and releasing of the Disp button will sequence the display between listings of artist names, song titles, and back to channel names. For sports channels, pressing the Disp button will toggle between the team/driver names and the current score of any live play-by-play game or the standings in a race being run.

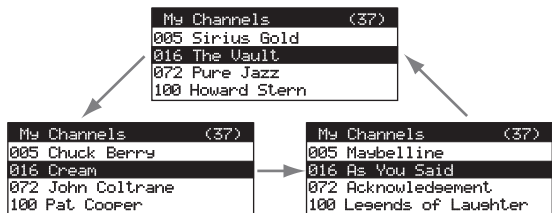

Use the Channel up/down buttons to scroll through the available subscribed channels. Press the Select button to tune to the highlighted channel. The new channel will begin playing and the display will revert to the Default screen for the new channel.

To exit the My Channels screen without changing to a different channel, press and hold the Disp button for 1½ seconds, until the Default screen is displayed.

Changing the Display

Momentarily pressing the Disp button while the Default screen is displayed changes the artist name and song title to a scrolling, single-line, large-format display for easier viewing from a distance.



Selecting Channels Directly

You can directly tune to any channel by entering the channel number using the 0 - 9 Number buttons. To enter a channel number, momentarily press and release the Select button. At the display prompt enter the three-digit channel number.



Operation

Channel Presets (Band Button)

You can store up to 30 of your favourite channels as presets for quick access with the press of a button.

Storing Channel Presets

Presets are stored in three banks (A, B, and C), each containing ten channel presets:

- 1 Momentarily press and release the Band button until the desired preset bank, A, B, or C, is displayed in the lower right corner of the default display screen.
- 2 Tune to the channel you wish to store as a preset (see Changing Channels and Categories, on page 57).
- 3 Press and hold the Number button in which you wish to store your favourite channel for 1½ seconds until you hear a beep. The screen will confirm that the channel has been stored, and the band and preset number will then be displayed in the lower-right corner of the display screen.



Note: If the Number button already has a preset channel stored in it, the preset will be replaced by the newly-stored channel.

Recalling Channel Presets

The 10 presets in the active bank (A, B, or C) can be selected by pressing the 0 - 9 buttons.

- 1 Press the Band button to activate the preset bank you want. The selected bank is shown in the lower-right corner of the default display screen. The Starmate 7 will tune to the last-tuned preset in the selected bank.
- 2 Press the desired preset button 0 - 9 to tune to a different preset in the bank. The channel will change and the display will revert to the Default screen for the new channel, with the preset bank and number shown in the lower-right corner.

Pressing and holding the Band button displays the My Presets screen (see below).

My Presets Screen

You can use the Channel UP/DOWN buttons to quickly see what's playing on all of your presets:

- 1 Press and hold the Band button to activate the My Presets screen.




My Presets	
A1	SIRIUS Gold
A2	The Vault
A3	Jam ON
A4	Pure Jazz

- 2 Use the Channel UP/DOWN buttons to scroll through the presets. When the preset you want to listen-to is highlighted, press the Select button to listen to it. Pressing the Channel UP/DOWN buttons will cycle through all of the stored presets by preset bank and number (for example, A1, A2...B1, B2...C1, C2...). Pressing the Channel UP/DOWN buttons after the last stored preset is displayed will return back to the first stored preset.

Operation

While the My Presets screen is active, pressing the Disp button will cycle the channel information on the screen between channel names, artist names, composer names (if available) and song title.

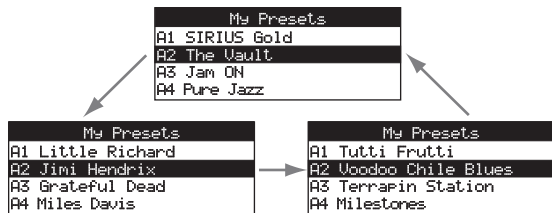

To exit the My Presets screen and return to Default display screen, press and hold the Band button for 1½ seconds.

Memory (Memo) and Song Seek (S-Seek) Functions

This feature allows you to capture and store information in the Starmate 7's memory about the currently tuned programming – artist, song, or sports team/ NASCAR car. The Starmate 7 then continuously searches all subscribed channels and alerts you when a program currently being played matches one stored in memory. A total of 30 artists and songs, plus one sports team/car may be stored in memory.



If you have saved a sports team or car in memory, when you initially power your Starmate 7 on you will be alerted if your sports team/car are playing/racing in a

game/race being broadcast. Also, you will be alerted should your team/car begin playing/racing while you're listening to your Starmate 7.

Storing Artist Names, Song Titles, and Sports Teams to Memory

If you are listening to a song, entertainment channel, or a sports team, and wish to save the artist, song, or sports team selection to memory for future S-Seek alerts, do the following:

- 1 For Artist Names or Song Titles:** If the currently-tuned channel is a music or entertainment channel, momentarily press and release the Memo button. The Starmate 7 will display a menu to choose to store either the artist name or the song title.



If either the artist name or song title is not available to save, the choice will be displayed as unavailable.

 


Using the Channel UP/DOWN buttons, choose Store Artist or Store Song (when available) and press the Select button to save the selection to memory. If both the artist and song are available to save, you will be prompted again to save whichever one you haven't yet saved.



Operation

- 2 For Sports Teams:** If the currently-tuned channel is a sports broadcast, momentarily press and release the Memo button. The Starmate 7 will display a menu to choose which sports team or NASCAR car should be saved to memory.



If any of the teams/cars is not available to save, that team/car will be displayed as unavailable.



Using the Channel UP/DOWN buttons, choose the desired sports team (when available) and press the Select button to save the current selection to memory.

- 3** To ensure that no duplicate entries are stored in memory, the Starmate 7 will check the stored memory list to ensure that the alert about to be stored is not already stored in memory. If a duplicate entry is found, an Unable to Store screen will be displayed for 1 second. The screen will then revert to the last active display mode.
- 4** If the new alert was successfully stored in memory, an Artist/Song Stored pop-up screen followed by an X Used/Y Empty screen will be displayed for 1 and 2 seconds respectively. X is the total number of listings stored in memory, and Y is the total number of memory listings still available for storage.



 
- 5** If all of the memory spaces are full when you press the Memo button, a Memory Full screen will be displayed for 1 second.



The Starmate 7 will then display a Replace - Cancel screen, which will allow you to choose whether to replace an existing alert stored in memory, or to cancel storing the alert to memory.



Use the Channel UP/DOWN buttons to choose whether to replace an existing alert or cancel saving the alert to memory. If you cancel saving the alert, the radio will revert to the last active display mode. If you have chosen to replace an existing alert, a listing of all the alerts stored in memory will be displayed.



Operation

 
Use the Channel UP/DOWN buttons to highlight the alert that you would like to overwrite and press the Select button to store the new alert. If the new alert was successfully saved in memory, an Artist/Song Stored pop-up screen followed by an X Used/Y Empty screen will be displayed for 1 and 2 seconds respectively.



X is the total number of listings stored in memory, and Y is the total number of memory listings still available for storage. The screen will then revert to the last active display mode.

Viewing Stored Alerts Stored in Memory

To view all the alerts you have saved to memory, press and hold the Memo button for 1½ seconds to enter the S-Seek mode. The alerts stored in memory will be displayed one-at-a-time in page format. Use the Channel UP/DOWN buttons to scroll through the listings. This function allows you to review previously stored program information.



To Activate, Cancel or Delete an Alert:

- 1 Press and hold the Memo button for 1½ seconds to enter the S-Seek mode, then use the Channel UP/DOWN buttons to find the alert which you wish to activate, cancel or delete.

- 2** Press the Select button. The Memory Recall screen will appear.



- 3** Use the Channel UP/DOWN buttons to highlight the option you want for that particular alert, and press the Select button. If you select Delete, a Delete Confirmation screen will appear. To permanently delete the alert from the memory list, highlight and select Yes.

An Artist Deleted pop-up screen followed by an X Used/Y Empty screen will be displayed for 1 and 2 seconds respectively X is the total number of listings saved in memory, and Y is the total number of memory listings still available for storage. The screen will then revert to the last active display mode.

 


When the S-Seek option is enabled, whenever the Starmate 7 is turned on, it automatically searches the incoming channels to determine if a match exists with the program information stored in the S-Seek memory. If one or more matches are found, a pop-up screen momentarily appears for 2 seconds and displays S-Seek Alert. You will also hear an audible beep tone, indicating that a match was found.



Operation

The Starmate 7 then displays the Sirius Seek List screen, which displays a list of the current matches. No alert is provided for the currently-tuned channel.



Sirius Seek List	
072	John Coltrane/Equinox
016	Cream
123	Trojans @ UCLA

Use the Channel UP/DOWN buttons to highlight the artist, song, or sports event that you wish to listen to, and then press the Select button to tune to it. If you don't make a selection within 10 seconds, the Starmate 7 will revert to the last active display mode. Note that the currently-tuned channel will continue to play until you make a new selection from the S-Seek list.

Jump Button

Your Starmate 7 has a special preset button called the Jump button that lets you quickly tune to a channel that you want to access frequently, such as a music channel or a sports channel. Pressing the Jump button 'jumps' to the specific channel you have programmed into the Jump button; pressing the Jump button again 'jumps' back to your original channel. (Refer to Jump Settings, on page 80 for instructions for configuring the Jump button.)

Other channel: If you've set the Jump button to the JumpSet option, pressing the Jump button will immediately tune to the channel you preset into the JumpSet. The Jump icon will be displayed in the lower right corner of the display screen to indicate that the Jump preset channel is currently tuned.



Pressing the Jump button again will return to the previous channel.

 
Note: The channel preset for the Jump button remains the same regardless of which preset memory bank is currently selected.

Operation


FM Presets Button

If you are using a wireless connection between your Starmate 7 and your vehicle's audio system (see page 44), the FM Presets button makes it easy for you to select between the five different FM transmitter preset frequencies. It also makes it easy for you to select new FM transmitter preset frequencies without having to go through the Menu Options (see page 76).


If the FM transmitter is set to OFF when you press the FM Presets button, the FM Transmitter On screen will be displayed. Select Yes to turn the transmitter ON.



 After you select Yes, the FM Presets list will be displayed. If you haven't set any of the FM preset frequencies, FM1 is factory-set to 88.1MHz; FM2 - FM5 will be Empty.



 FM Presets
FM1 88.1 MHz
FM2 <EMPTY>
FM3 <EMPTY>
FM4 <EMPTY>
FM5 <EMPTY>



<EMPTY>
88.1 MHz
88.3 MHz
88.5 MHz
88.7 MHz

Use the Channel UP/DOWN buttons to highlight the preset you wish to change, and press the Select button to choose the preset. The FM frequency screen will appear.

Use the Channel UP/DOWN buttons to highlight the frequency you wish to select for the preset and press the Select button. The FM frequency will then be stored in the preset. To select that preset and exit, press the Menu button.



If you frequently travel to different areas, you can set the five FM presets to frequencies that are not being used by broadcasters in those areas.

Note: You can display the FM Preset list at any time by pressing and holding the FM Presets button.

If the FM transmitter is already set to ON when you press the FM Presets button, the Frequency screen will be displayed for 3 seconds showing the currently-selected FM frequency and preset.

 


Pressing the FM Presets button again while the Frequency screen is displayed will change to the next FM preset frequency.

Menu Options

Menu Options


Menu Options allows you to set and/or change the various features and settings of your Starmate 7. Press and release the Menu button to display the Menu Options.



Use the Channel UP/DOWN buttons to highlight selections in the menu lists and press the Select button to select them. To exit a menu, press the Menu button. If you don't make a selection within 10 seconds the Starmate 7 will exit the Menu Options screen and revert to the last active display mode. You can exit any Menu Options screen by pressing the Menu button.

Sirius ID

 This displays your Starmate 7's 12-digit Sirius ID (SID) number.



The SID is unique to each Sirius radio, and is required to activate your SIRIUS service. We recommend that you write this number in the space provided near the end of this User Guide. No adjustments are allowed in this mode.

FM Transmitter

The FM Transmitter menu option allows you to enable or disable the Starmate 7's built-in FM transmitter, and select up to 5 different preset FM transmitter frequencies.

FM Transmitter
FM Presets
FM On/Off

FM Presets

You can set up to 5 preset FM transmitter frequencies:

- 1 On the FM Transmitter screen, highlight and select FM Presets. The FM Presets screen will appear. Note: You may also enter this list by pressing and holding the FM Transmitter button.

FM Presets	
FM1	88.1 MHz
FM2	<EMPTY>
FM3	<EMPTY>
FM4	<EMPTY>

<EMPTY>
88.1 MHz
88.3 MHz
88.5 MHz
88.7 MHz

- 2 Highlight the FM preset you wish to set (or change) and press the Select button. A list of FM frequencies will be displayed, beginning with the currently selected FM frequency for the preset.
- 3 Use your vehicle's FM radio to locate FM frequencies that aren't being used by local broadcasters, and where there is no interference from adjacent FM stations. These are the frequencies you should added to the FM Presets list.
- 4 Highlight the frequency you wish to select for the preset and press the Select button. The FM frequency will then be stored in the preset. (If you do not want a frequency for the preset, choose Empty from the menu.)

Menu Options

- 5 Select FM frequencies for other presets using the same steps. To exit the FM Presets menu, press the Menu button.

FM On/Off

To turn the Starmate 7's FM transmitter On or Off, highlight and select FM On/Off on the FM Transmitter screen. The FM On/Off screen will appear.



To turn the FM transmitter ON, highlight and select FM On; to turn the FM transmitter OFF, highlight and select FM Off.

 
Settings

The Settings menu lets you access the Display Options, Jump Settings, Memory Options, Audio Level, Confirmation Tone and Parental Control menu options.



Display Options

You can adjust the brightness and contrast of the Starmate 7's LCD display screen to improve its visibility in different lighting conditions.



Brightness adjusts the overall intensity of the LCD display to help with viewing in different lighting conditions. Contrast adjusts the relationship between the background and the text on the LCD display.

Use the Channel UP/DOWN buttons to adjust the brightness and contrast. The bar graphs will indicate the change.



Note: You can change the screen brightness without entering the menu system by pressing and holding the category Left or Right buttons.

Menu Options

Jump Settings

Jump Settings controls the actions of the Jump button. You can also access the Jump Settings screen by pressing and holding the Jump button.



Two Jump setting options are available, Traffic and Jump Set. The Jump icon indicates the currently-selected option.

The Traffic option sets the Jump button to provide a traffic report for a selected city, while the JumpSet option assigns any channel to the Jump button.

Traffic

 
Please note: Traffic is currently not available in Canada.

JumpSet

- 1 On the Jump Settings screen, highlight and select JumpSet. The JumpSet screen will appear.



- 2 Tune to the channel you want assigned to the Jump button (you can use the Channel UP/DOWN buttons, your presets or enter the channel number directly). When the channel is tuned, press and hold the Jump button for 2 seconds until the screen is displayed.




The selected channel is now assigned to the Jump button.

Note: While listening to any channel, you can assign that channel to the Jump button by simply pressing and holding the Jump button for 2 seconds.

Menu Items

Memory Options

 Memory Options lets you turn the automatic S-Seek feature ON or OFF, and also provides a way to clear (erase) all the stored S-Seek alerts from memory.



Auto Memory Search

This lets you turn the S-Seek function ON or OFF.

 
On the Memory Options screen, highlight and select Auto Memory Search. The Auto Memory Search screen will appear. Highlight and select either ON or OFF.



Clear All Memory

This clears all S-Seek memory entries.

On the Memory Options screen, highlight and select Clear All Memory. The Clear All Memory? screen will appear. Highlight and select either Yes or No.




Audio Level

Use the Channel UP/DOWN buttons to adjust the Starmate 7's audio output level. The bar graph will indicate the change.



Confirmation Tone

 The Starmate 7 will sound an audio alert tone when you power it On or Off, as well as when an S-Seek alert or other alert is activated. The default setting is On. To change the Confirmation Tone setting, use the Channel UP/DOWN buttons to highlight On or Off, and press the Select button.



Menu Items

 
Parental Control

Your Starmate 7 has the ability to lock channels you do not want others (such as children) to access without your permission. Locked channels will not appear on the Channel List screen, the Category List screen or when browsing channels with the Channel UP/DOWN buttons. When the anyone tries to access a locked channel using the Direct Tuning function, an Enter Code screen will be displayed and the channel won't be accessed until the correct code is entered.

Note: Locked channels will appear on the My Channels screen. See page 58.

Locking and Unlocking Channels

- 1 Select the Parental Control menu option. The Parental Control screen will appear.



- 2 Select Lock/Unlock. You will need to enter the lock code to proceed. Refer to "Changing the Lock/Unlock Code" on page 85 for information on how to set the lock code.
- 3 Once you enter the lock code the Lock/Unlock screen will appear. Highlight the channel you wish to lock or unlock from the channel list. Pressing the Select button will either add the word Lock next to the channel name to indicate that the channel will be locked, or unlock a locked channel by removing the word Lock.

Changing the Lock/Unlock Code

The first time you access the Lock/Unlock menu, you must enter the default lock code. The default lock code is 0000. You can keep this code or change it. To change the lock code:

- 1 Select the Parental Control menu option.
- 2 Select the Edit Code menu option. The Enter Code screen will appear.



- 3 Enter the default lock code (0000) or the current lock code if you have changed it from the default code. (If you enter the wrong code, a message will be displayed indicating that the wrong code has been entered.)
- 4 The New Code prompt will be displayed. Enter your new four digit code using the 0 - 9 number buttons. You will then be prompted to enter the new code again to confirm.
- 5 When the new lock code is confirmed, the lock code is changed.

 
You can use this same procedure to change the lock code again after you have changed it from the default code.

Note: If you have forgotten your Parental Control code, call Sirius Customer Service for help.

Menu Options

Time Based Features

The Time Based Features screen lets you adjust the following features:




- **Clock** - Sets the clock format, time zone, and daylight savings time function.
- **Alarm** - Sets an alarm for a specific time.
- **Program Alert** - Sets the radio to tune to a specific channel at a specified time.
- **Auto Shutdown** - Sets the radio to turn off at a specified time.
- **Sleep Mode** - Sets the radio to turn off after a designated period of time.

Use the Channel UP/DOWN buttons to highlight the option you wish to adjust, and press the Select button.

Clock

 The Clock screen allows you to setup the clock that appears on the Default screen, based on the format desired and the time zone in which you reside. The actual time is provided via the Sirius satellite signal, and will automatically update your Starmate 7.



Format: Displays the time in either 12-hour (default) or 24-hour format.

Format
12 Hour
24 Hour

Time Zone: Since the clock adjusts the time automatically, it is important to specify your time zone. Select your time zone from the list of the available time zones.

Time Zone
(GMT -6:00) Central
(GMT -5:00) Eastern
(GMT -4:30) Atlantic
(GMT -3:30) Newfoundland

Daylight Savings Time: Select On if your area observes Daylight Savings Time; select Off if your area does not.

Daylight Savings Time
DST Observed
DST Not Observed

Alarm

 
The Alarm screen lets you to set your Starmate 7 to turn on at a specific time. The last selected channel prior to shutdown will play when the Starmate 7 powers on.

Alarm
Set Alarm
Alarm Time

Set Alarm: This turns the alarm ON and OFF.


Menu Options

Alarm Time: This lets you set the alarm time. Use the Category LEFT and RIGHT buttons to set the hours and use the Channel UP/DOWN buttons to set the minutes when you want the Starmate 7 to power on. (The default time is 12:00.)




Program Alert

 The Program Alert screen lets you program the radio to automatically tune to a specific channel at a specific time. The radio must be powered on in order for this feature to function.




Program Time/Day: Program the day and time you want the Starmate 7 to tune to the specific channel.

 - 1 Highlight and select Program Time/Day. The Program Time/Day screen will appear.



 - 2 Highlight and select Time. The Program Time screen will appear. To select the time you wish to tune to the specified channel, use the Category LEFT and RIGHT buttons to change the hours, and the Channel UP/DOWN buttons to set the minutes. When you have selected the desired time, press the Select button to set the time and exit.



- 3 On the Program Time/Day screen, highlight and select Day. The Program Day screen will appear.

 


- 4 Using the channel up and down buttons, select the day of the week you wish to tune to the selected channel, i.e., Monday, Tuesday, etc., and press the Select button.

To exit the Program Time/Day menu, press the Menu button.

Channel Number: Set the channel to which the radio will tune when Program Alert is On:

- 1 On the Program Alert screen, highlight and select Channel Number. A channel list screen will appear.



- 2 Use the Channel UP/DOWN buttons to highlight the channel you want the Starmate 7 to play when Program Alert turns it ON, then press the Select button to set the channel.

Program Alert On/Off: Turn Program Alert On or Off:

- 1 On the Program Alert screen, highlight and select Program Alert On/Off. The Program Alert On/Off screen will appear.

 
Menu Options

2 Highlight and select On or Off.

To exit the Program Alert On/Off menu, press the Menu button.

Auto Shutdown

Auto Shutdown lets you program the Starmate 7 to automatically shut off after a one-hour period of inactivity (no button presses or other user intervention). After selecting Auto Shutdown on the Time Based Features screen the Auto Shutdown screen will appear.




Select Enable to activate the auto shutdown; select Disable to cancel an auto shutdown.

After 59 minutes of inactivity, a beep tone will sound and a Cancel Auto Shutdown display prompt appears on the screen to allow you to delay the automatic shutdown. Pressing the Select button will reset the Auto Shutdown for another 1-hour period.

Sleep Mode


The Sleep Mode screen lets you program the Starmate 7 to automatically shut OFF after a selected period of time.

 Highlight and select the amount of time you want the Starmate 7 to remain ON before it shuts OFF.



Signal Indicator

 When using your Starmate 7 indoors with the optional SiriusXM Home Dock or Boombox, it is important to aim the antenna for maximum signal reception. The Signal Indicator screen visually shows the strength of the satellite and terrestrial signals being received by the Starmate 7. (Refer to the Home Dock User Guide for more information about properly orienting the antenna.)



The SAT bar graph indicates the strength of the satellite signal strength; the TER bar graph indicates the strength of the terrestrial signal strength (if available).

Menu Options

Factory Default

 
The Factory Default option will restore almost every feature of the Starmate 7 to its original factory settings. The following is a list of all features affected by the Factory Default option:

- All Presets are cleared
- All S-Seek Memory entries are cleared
- Display brightness set to 50%
- Display Contrast set to 50%
- FM Transmitter set to On
- FM Frequency set to 88.1 MHz
- Clock set to 12-Hour Format
- Time Zone set to Eastern Standard Time
- Daylight Savings Time set to Observed
- Auto Shutdown set to Off
- Sleep Mode set to Off
- Auto Select set to Off
- Program Alert cleared


Note that the Parental Control feature is not affected by the Factory Default option. If a code has been set for the Parental Control feature, the code will not be reset by the Factory Default feature, preventing someone from circumventing the Parental Control feature. Channels which have been locked will remain locked.

To activate the Factory Default feature, and restore the above features to their factory defaults, do the following:

- 1 Highlight and select Factory Default from the Menu Options screen. The Restore Settings? screen will appear.



 - 2 Highlight and select Yes to restore the above settings to the their factory default settings, or select No to leave them as-is and return to the Menu Options screen.
- 3 If you select Yes, a confirmation screen appears. Use the Channel UP/DOWN buttons to select Yes to restore all settings to the settings from the factory, or select No to leave them as-is and return to the Menu Options menu.



- 4 If you select Yes, the Starmate 7 will revert to the original factory settings.
- 5 When the Factory Default is complete, the Starmate 7 will automatically tune to Channel 184 (the Sirius preview channel) and display "Call 1-888-539-SIRIUS to Subscribe". Your Starmate 7 is still subscribed to the Sirius service, and you can tune to any channel that hasn't been locked using the Parental Control feature.

Troubleshooting

Troubleshooting

Symptom	Solution
Radio does not power on	Blown fuse, or the power cable is not properly connected. Check for a bad fuse and check power cable connection
Display reads: Antenna Not Detected	The satellite antenna is not connected to the Vehicle Dock. Check the satellite antenna connection to the Vehicle Dock.
Display reads: Acquiring Signal	No satellite signal is being received. Check for obstacles over or around the satellite antenna. Change the vehicle location to eliminate nearby obstacles (bridges, overpasses, tress, buildings, etc.).
Audio static or loss of clarity	The vehicle radio's FM frequency contains static. Locate a quiet FM frequency on your vehicle radio and set the FM transmitter frequency of the Starmate 7 Radio to match. If using the <i>PowerConnect</i> Vehicle Dock AUDIO OUT connector, check the cable connections.
No sound	The audio cables are not connected, or the FM radio is set to the wrong frequency. Check the audio cables at the Vehicle Dock and the vehicle's audio system. Tune the vehicle's FM radio to the same FM frequency the Starmate 7 Radio's FM transmitter is tuned.

Product Specifications

Specifications

System

Power Requirements:	9-16 V DC, 500 mA (max)
Operating Temperature:	-4°F to +140°F (-20°C to +60°C)
Audio Output:	1.0 V _{rms} (max)

Starmate 7 Radio

Dimensions:	4.9 in (width) x 1.9 in (height) x 0.6 in (depth) 124 mm (width) x 49 mm (height) x 16 mm (depth)
Weight:	2.5 oz (71 g)

PowerConnect Vehicle Dock

Dimensions:	4.0 in (width) x 2.0 in (height) x 1.1 in (depth) 102 mm (width) x 52 mm (height) x 28 mm (depth)
Weight:	1.3 oz (37 g)
Audio Connector:	1/8 in (3.5 mm) female
Antenna Connector:	SMB male

PowerConnect Power Adapter

Dimensions:	3.7 in (width) x 1.7 in (height) x 1.3 in (depth) 94 mm (width) x 43 mm (height) x 34 mm (depth)
Weight:	2.4 oz (69 g)
Input / Output:	9-16 V DC / 5 V DC, 1.5 A
Cable Length:	4 ft 7 in (1.4 m)

Vehicle Antenna

Type:	SiriusXM Magnetic Mount
Connector:	SMB female, right angle
Cable Length:	21 ft (6.4 m)

Aux In Cable

Connectors:	1/8 in (3.5 mm) stereo male to 1/8 in (3.5 mm) stereo male
Cable Length:	4 ft (1.2 m)

Note: Features and Specifications are subject to change without notice.

IC Statement



Warning

Changes or modifications not expressly approved by the manufacturer could void the user's authority to operate the equipment.

Canadian Compliance

This Class B digital apparatus complies with Canadian ICES-003.

IC STATEMENT

Operation is subject to the following two conditions: (1) this device may not cause interference, and (2) this device must accept any interference, including interference that may cause undesired operation of the device. For product available in the Canada market, only channel 1~11 can be operated. Selection of other channels is not possible. This device and its antenna(s) must not be co-located or operation in conjunction with any other antenna or transmitter. To reduce potential radio interference to other users, the antenna type and its gain should be so chosen that the equivalent isotropically radiated power (e.i.r.p) is not more than that permitted for successful communication. IC Radiation Exposure Statement: This equipment complies with IC RSS-102 radiation exposure limits set forth for an uncontrolled environment. This equipment should be installed and operated with minimum distance 20cm between the radiator & your body.

Copyrights and Trademarks

© 2013 Sirius XM Canada Inc. "SiriusXM", the SiriusXM logo, channel names and logos are trademarks of Sirius XM Radio Inc. and are used under license. "NFL" and the NFL Shield design are trademarks of the National Football League. NASCAR® is a registered trademark of the National Association for Stock Car Auto Racing, Inc. The NBA and NBA member team identifications are the intellectual property of NBA Properties, Inc. and the respective NBA member teams. © 2013 NBA Properties, Inc. All rights reserved. NHL and the NHL Shield are registered trademarks of the National Hockey League. © NHL 2013. Elvis Radio logo © EPE Reg. U.S. Pat & TM off. CFL® is a registered trademark of the Canadian Football League. All other trademarks, service marks, images and logos are property of their respective owners and are used with permission. All Rights Reserved. Required subscription sold separately. Premier subscription required for some channels. Prices and programming is subject to change. See Customer Agreement for complete terms at www.siriusxm.ca.

Sirius ID

Write down the Sirius ID (SID) of your Starmate 7 in the space provided below.

SID: _____

siriusxm.ca

**Sirius XM Canada Inc.
135 Liberty St. - 4th floor
Toronto, Ontario, M6K 1A7**

1-888-539-SIRIUS (7474)

© 2013 Sirius XM Canada Inc.

Starmate 7 User Guide E 130301b